MITSUBISHI

三菱工業用ミシン部品カタログ

Industrial Sewing Machine Parts Catalog

Model PLK-B3530
PLK-B3530L
PLK-B6030

CSMP

目　次　CONTENTS　Page

A	全体構成	Construcrion	1
B	本体関係 (Ⅰ)	Arm bed & It's accessories (Ⅰ)	2
C	本体関係 (Ⅱ)	Arm bed & It's accessories (Ⅱ)	6
D	縫い機構	Sewing mechanism	8
E	中押え機構	Presser bar lifting mechanism	10
F	糸切り機構	Thread trimming mechanism	12
G	X-Yテーブル機構(Ⅰ)	X-Y Table mechanism (Ⅰ)	14
H	X-Yテーブル機構(Ⅱ)	X-Y Table mechanism (Ⅱ)	16
J	外押え機構	Work holder mechanism	18
K	ワイパー機構・検出器	Wiper & detector mechanism	20
L	給油機構	Oil lubrication mechanism	22
M	配線・配管関係	Cable component & Pneumatic control unit	24
N	テーブル関係	Table & Stand	26
P	附属品	Accessories	28
R	オプションパーツ	Option parts	30
	索引	Index	32

P-203B 199808

部品コードの採番形式

MITSUBISHI SPARE PARTS No. Designation system

1. 部品コードについて CONCERNING PARTS CODE.

部品をご注文される場合は、部品コードをお知らせください。

Please inform the part number, when these parts are ordered.

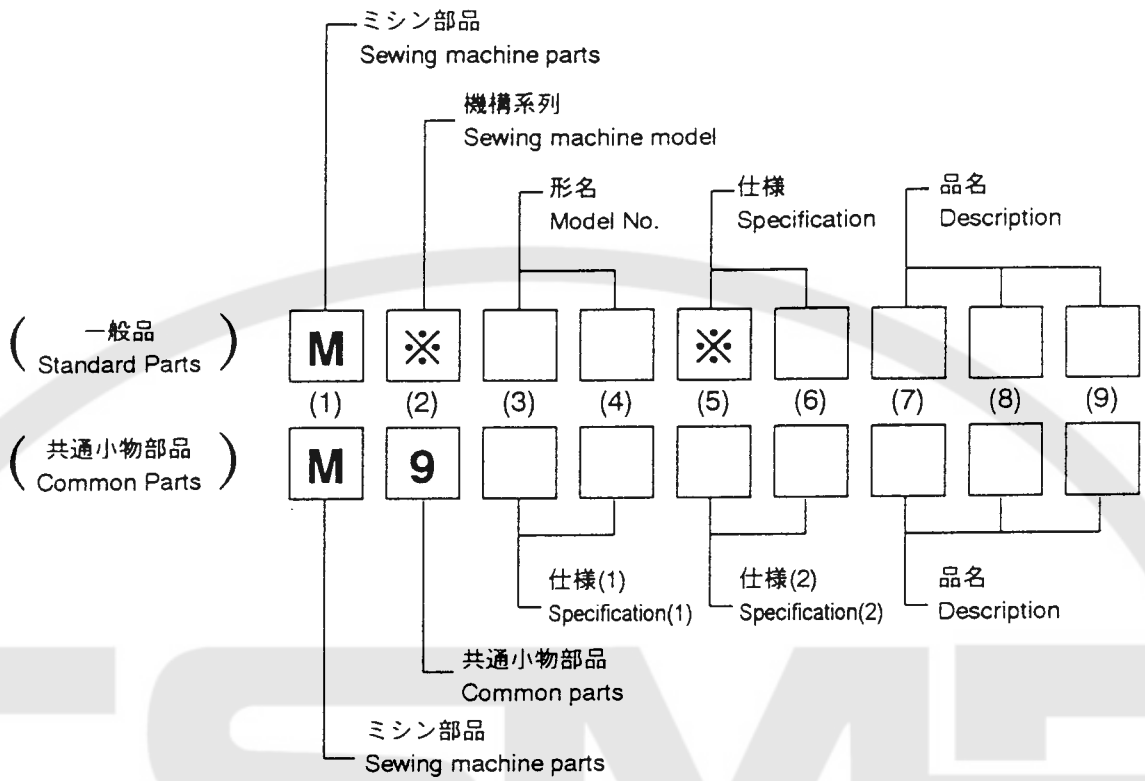

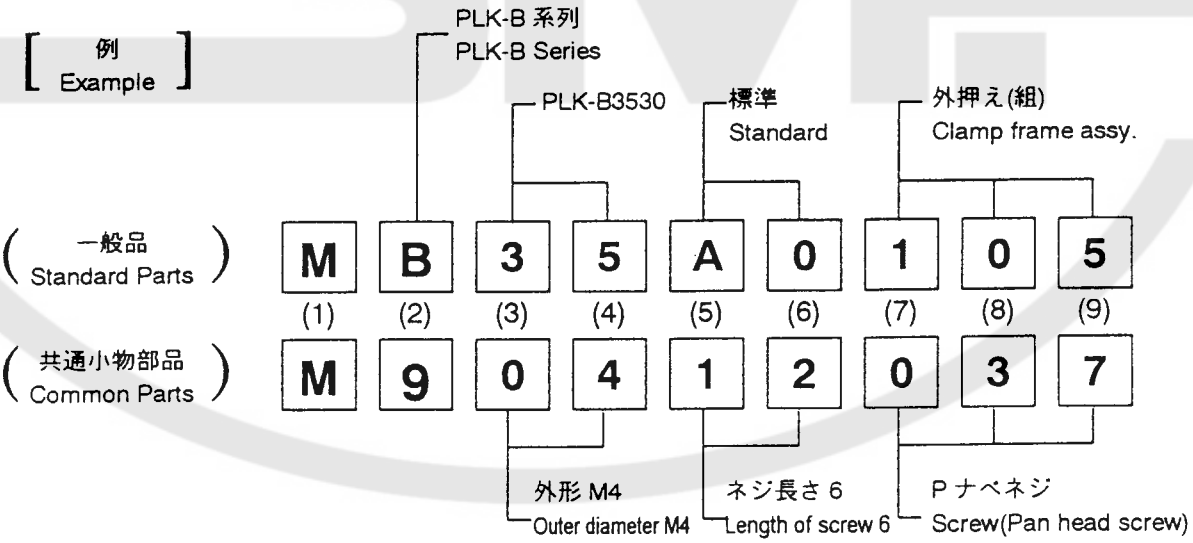

2. 変更マークについて CONCERNING MODIFICATION MARK.

変更マーク欄に＊記号のある部品は、形状、寸法などの変更履歴がありますので、ご注文の際にはご使用の製品の製造番号とあわせてご連絡ください。

The parts marked with * in the modification column has been changed the shape or size etc. So when these modified parts are ordered please inform the serial number of the sewing machine.

注：一般品についての機種形名は、その部品が最初に使用された機種形名を示します。従って長期にわたる場合は、機種の改廃が行われるため、当初の機種以外の機種で使用されている場合があります。

Sewing machine Models, of Standard Parts are Indicated model of these parts are registered firstly. Parts are used for not only the indicated model, but also another models, in reason of New development, improvement after.

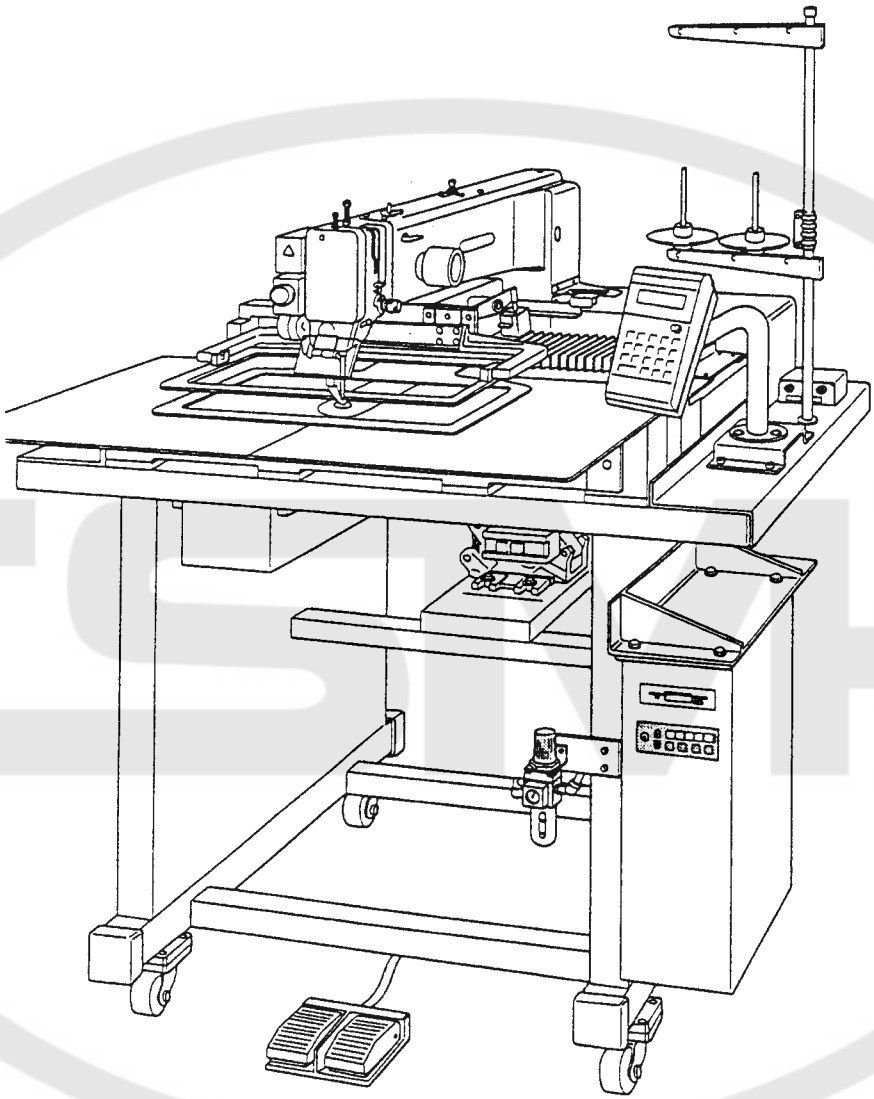

B 本体関係（Ⅰ）－1
ARM BED AND IT'S ACCESSORIES（Ⅰ）－1

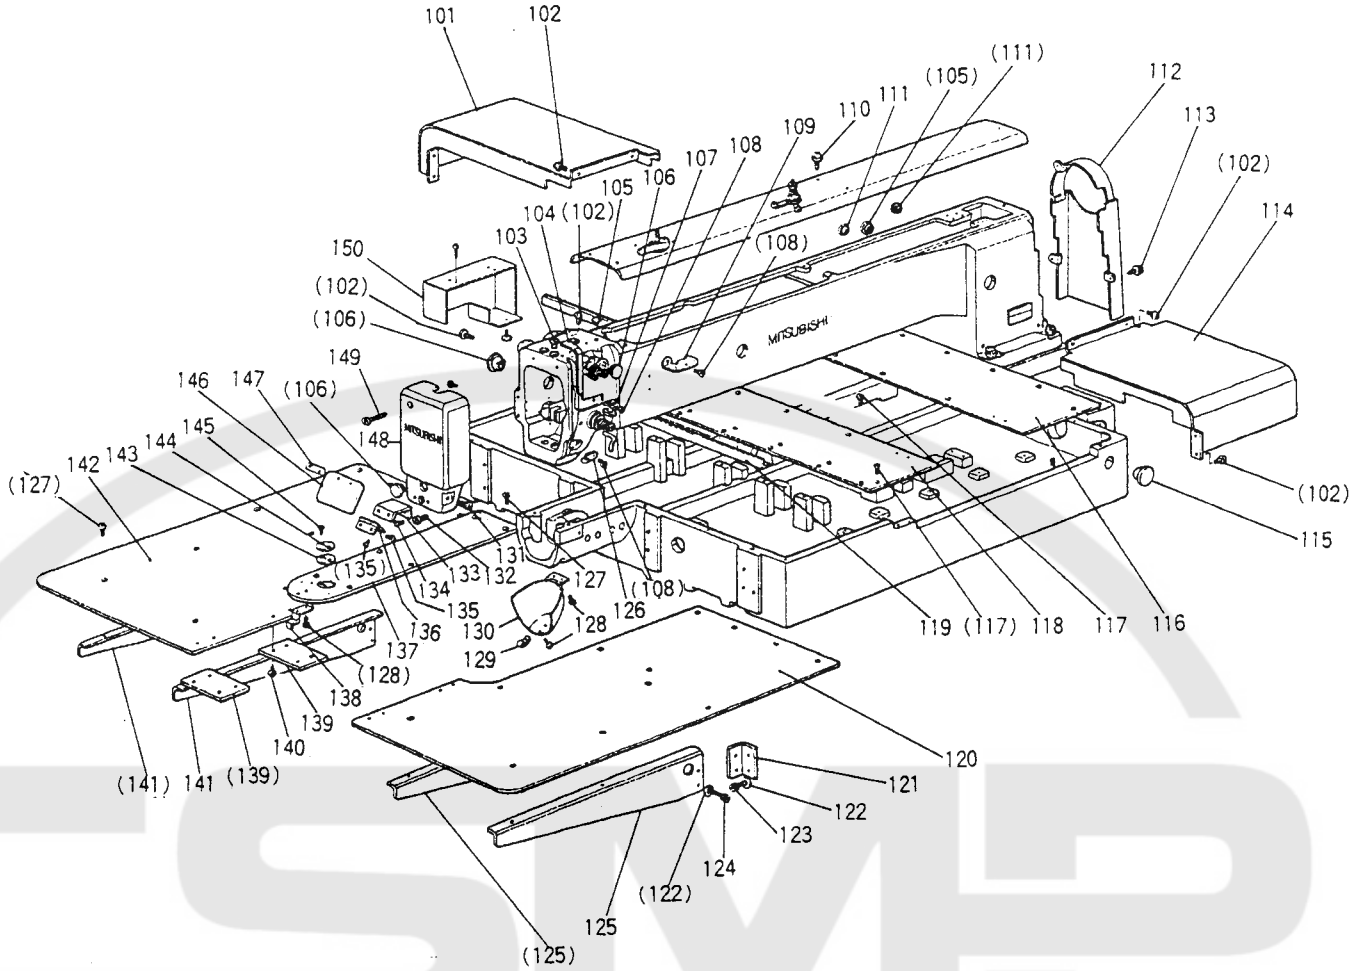

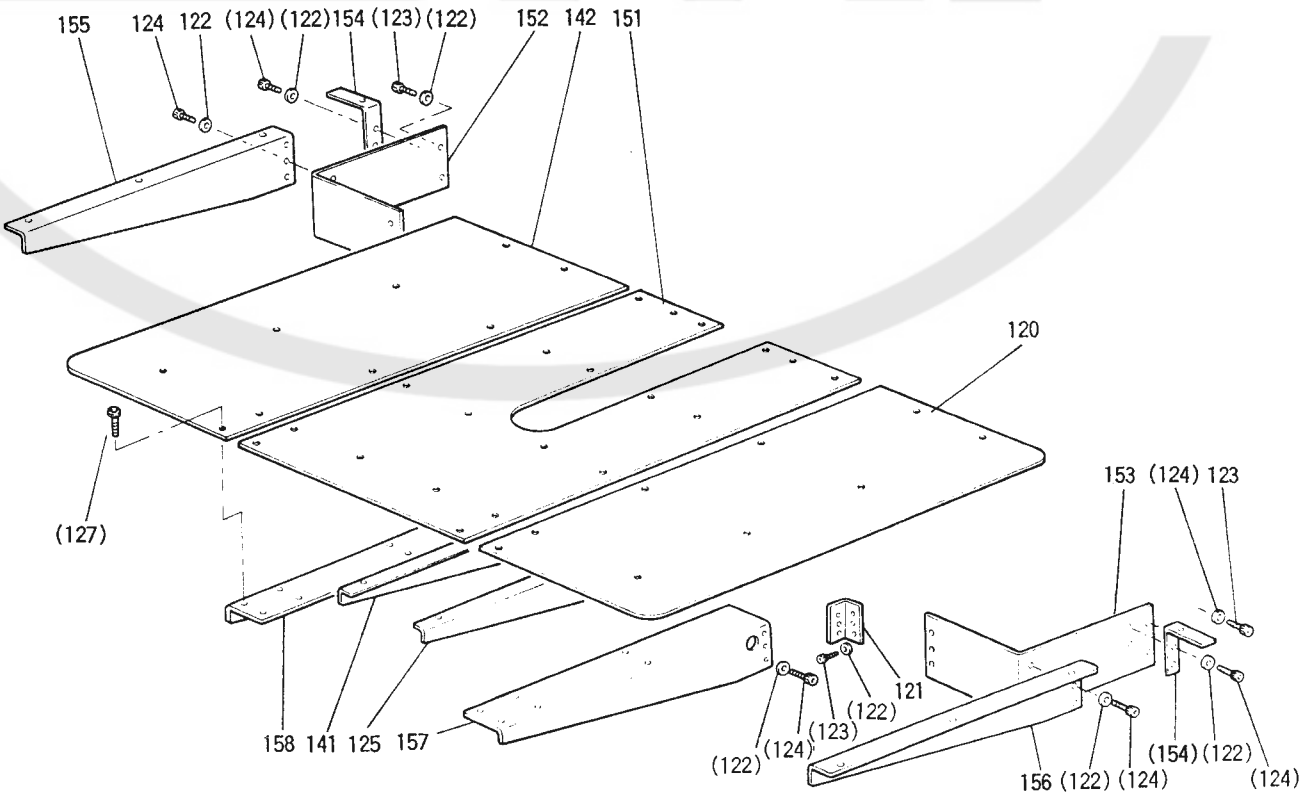

B 本体関係（Ⅰ）－1
ARM BED AND IT'S ACCESSORIES（Ⅰ）－1

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
B101	MB35A0849	ﾓｰﾀｶﾊﾞｰ(ﾋﾀﾞﾘ)	Motor cover(left)	1	1	
B101	MB65A0849	ﾓｰﾀｶﾊﾞｰ(ﾋﾀﾞﾘ)	Motor cover(left)			1
B102	M91054004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×8	Screw M4×8	14	14	14
B103	MN10A4742	ﾌﾀ	Oil cap	1	1	1
B104	MA20A0584	ﾃﾝﾋﾞﾝｶﾊﾞｰ	Thread take-up cover	1	1	1
B105	M91304080	ｺﾞﾑｾﾝ	Rubber plug	3	3	3
B106	M91910080	ｺﾞﾑｾﾝ	Rubber plug	6	6	6
B107	MG43A0181	ｲﾄｱﾝﾅｲ(ﾅｶ)	Thread guide	1	1	1
B108	M90990002	ﾋﾗﾈｼﾞ M4×8	Screw M4×8	3	3	3
B109	MF36A1180	ｲﾄｱﾝﾅｲ	Thread guide	1	1	1
B110	M91276004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×30	Screw M4×30	5	5	5
B111	M90883080	ｺﾞﾑｾﾝ	Rubber plug	3	3	3
B112	MB35E0776	ﾍﾞﾙﾄｶﾊﾞｰ	Belt cover	1	1	1
B113	M91330004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M5×8	Screw M5×8	3	3	3
B114	MB35A1849	ﾓｰﾀｶﾊﾞｰ(ﾐｷﾞ)	Motor cover(right)	1	1	
B114	MB65A1849	ﾓｰﾀｶﾊﾞｰ(ﾐｷﾞ)	Motor cover(right)			1
B115	M92701080	ｺﾞﾑｾﾝ(φ27)	Rubber plug(φ27)	2	2	2
B116	MA35A7339	ｶﾊﾞｰ(ｳｼﾛ)	Cover(rear)	1	1	
B116	MA60A1339	ｶﾊﾞｰ(ｳｼﾛ)	Cover(rear)			1
B117	M90436037	ｻﾗﾈｼﾞ M4×8	Screw M4×8	26	26	38
B118	MA35A8339	ｶﾊﾞｰ(ﾅｶ)	Cover(middle)	1	1	
B118	MA60A2339	ｶﾊﾞｰ(ﾅｶ)	Cover(middle)			1
B119	MA35A9339	ｶﾊﾞｰ(ﾏｴ)	Cover(front)	1	1	
B119	MA60A3339	ｶﾊﾞｰ(ﾏｴ)	Cover(front)			1
B120	MA36A0474	ｽﾍﾞﾘｲﾀ(ﾐｷﾞ)	Slide plate (right)	1	1	
B120	MA60A0474	ｽﾍﾞﾘｲﾀ(ﾐｷﾞ)	Slide plate (right)			1
B121	MA35A0361	Lｶﾞﾀｶﾅｸﾞ	L-bracket	4	4	
B121	MA20A0361	Lｶﾞﾀｶﾅｸﾞ	L-bracket			4
B122	M90511050	ｻﾞｶﾞﾈ 5	Washer 5	16	16	38
B123	M95002017	ｾﾌﾃｨｿｹｯﾄ M5×12	Bolt M5×12	8	8	16
B124	M90511056	ｾﾌﾃｨｿｹｯﾄM5×8	Bolt M5×8	8	8	22
B125	MA35A0429	ｻｻｴｶﾅｸﾞ(ﾐｷﾞ)	Bracket (right)	2	2	
B125	MA60A4426	ｻｻｴｶﾅｸﾞ(ﾐｷﾞ)	Bracket (right)			1
B126	MF70A1180	ｲﾄｱﾝﾅｲ(ｼﾀ)	Thread guide	1	1	1
B127	M90990002	ﾋﾗﾈｼﾞ M4×8	Screw M4×8	28	28	38
B128	M90906003	ﾏﾙﾋﾗﾈｼﾞ9/64(40)×3.2	Screw 9/64(40)×3.2	6	6	6
B129	MS01A0361	ｶｹﾞｶﾞﾈ	Latch	1	1	1
B130	MB60E6339	ｼﾘﾝﾀﾞｰｶﾊﾞｰ(ｸﾐ)	Cylinder cover complete	1	1	1
B131	M90909003	ﾏﾙﾋﾗﾈｼﾞ11/64(40)×6	Screw 11/64(40)×6	1	1	1
B132	M91079004	ﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×16	Screw M4×16	1	1	1
B133	MB60A0601	ｱｲｶﾞｰﾄﾞｱﾀﾞﾌﾟﾀｰ	Eye guard adapter	1	1	1
B134	M91110002	ﾋﾗﾈｼﾞ11/64(40)×8	Screw 11/64(40)×8	2	2	2
B135	M90806002	ﾋﾗﾈｼﾞ1/8(44)×6	Screw 1/8(44)×6	4	4	4
B136	MS01A1739	ﾋﾝｼﾞ	Hinge	1	1	1
B137	MS18A0470	ｽﾍﾞﾘｲﾀ	Slide plate	1	1	1
B138	MS01A0192	ｲﾀﾊﾞﾈ	Leaf spring	1	1	1
B139	MA35A0601	ｱﾀﾞﾌﾟﾀｰ	Adapter	2	2	
B140	M91058004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×6	Screw M4×6	8	8	
B141	MA35A1429	ｻｻｴｶﾅｸﾞ(ﾋﾀﾞﾘ)	Bracket (left)	2	2	
B141	MA60A5426	ｻｻｴｶﾅｸﾞ(ﾋﾀﾞﾘ)	Bracket (left)			1

B 本体関係（Ⅰ）－2
ARM BED AND IT'S ACCESSORIES（Ⅰ）－2

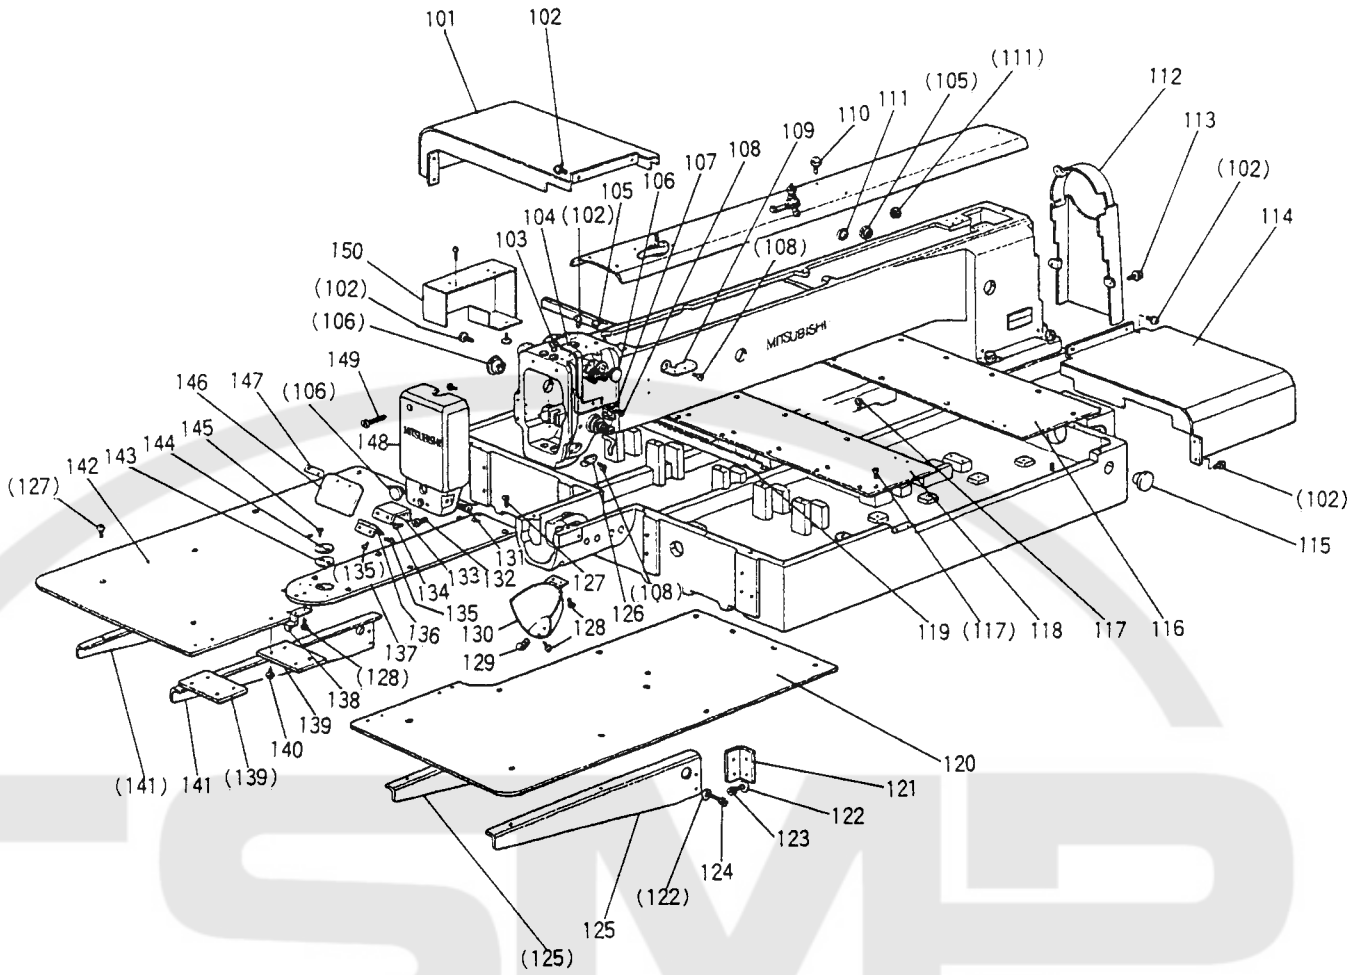

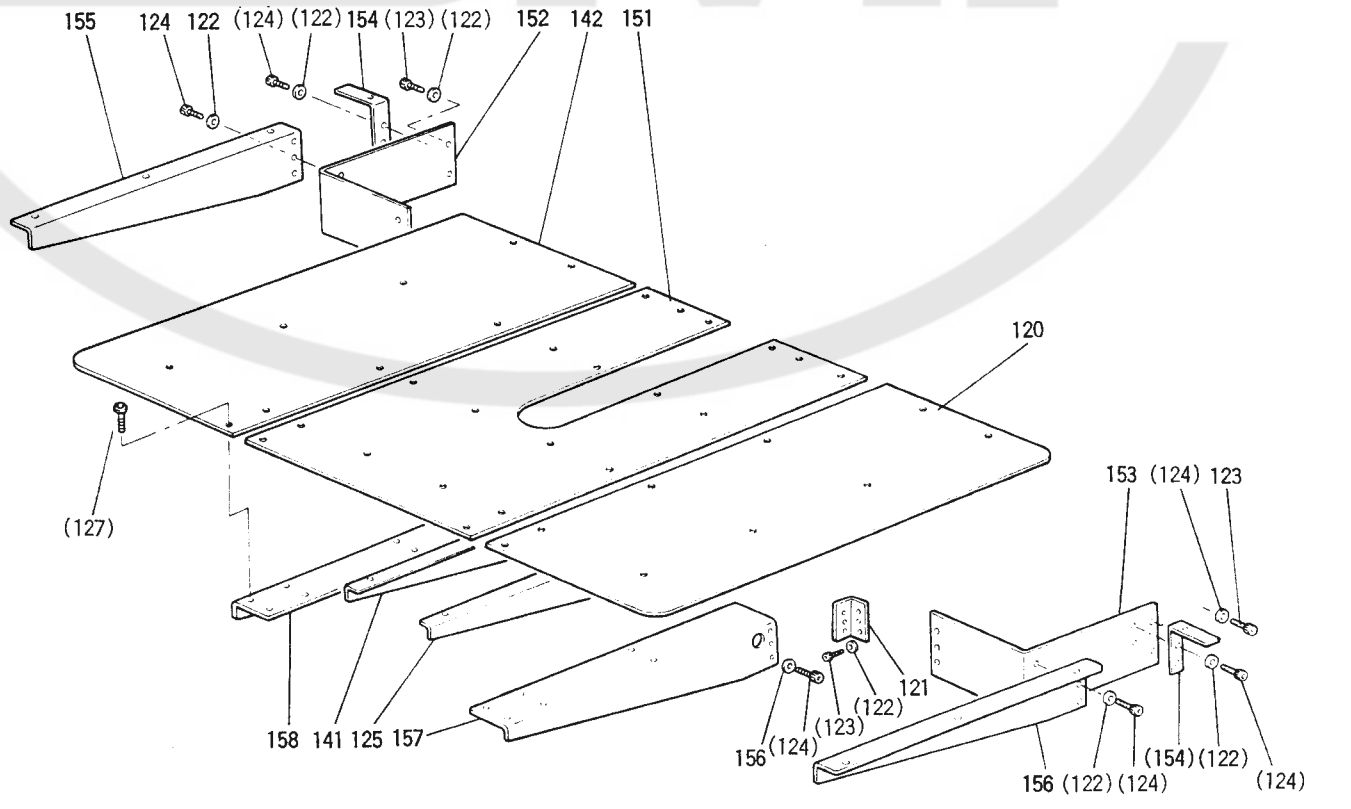

B 本体関係（Ⅰ）－2
ARM BED AND IT'S ACCESSORIES（Ⅰ）－2

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
B142	MA36A0473	ｽﾍﾞﾘｲﾀ(ﾋﾀﾞﾘ)	Slide plate (left)	1	1	
B142	MA36A0473	ｽﾍﾞﾘｲﾀ(ﾋﾀﾞﾘ)	Slide plate (left)			1
B143	MS01A1476	ｽﾍﾟｰｻ	Spacer	1	1	1
B144	MS03A1101	ﾊﾘｲﾀ	Needle plate	1	1	1
B145	M90605010	ｻﾗﾈｼﾞ2/32(56)×2.8	Screw 2/32(56)×2.8	2	2	2
B146	MS01A0160	ｱｲｶﾞｰﾄﾞ	Eye guard	1	1	1
B147	MS01A0477	ｱﾃﾞｶﾞﾈ	Adapter	1	1	1
B148	MB60E0830	ﾒﾝｲﾀ	Face plate	1	1	1
B149	M90432038	ﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×30	Screw M4×30	1	1	1
B150	MB61A2339	ﾘﾝｸｶﾊﾞｰ	Link cover	1	1	1
B151	MA60A0472	ｽﾍﾞﾘｲﾀ(ﾅｶ)	Slide plate(center)			1
B152	MA60A0601	ｻｻｴﾄﾘｯｹｲﾀ(ﾋﾀﾞﾘ)	Bracket (left)			1
B153	MA60A1601	ｻｻｴﾄﾘｯｹｲﾀ(ﾐｷﾞ)	Bracket (right)			1
B154	MA60A1426	ｻｻｴｶﾅｸﾞ	Bracket			2
B155	MA60A0426	ｻｻｴｶﾅｸﾞ(ﾋﾀﾞﾘ)	Bracket (left)			1
B156	MA60A2426	ｻｻｴｶﾅｸﾞ(ﾐｷﾞ)	Bracket (right)			1
B157	MA60A3426	ｻｻｴｶﾅｸﾞ(ﾐｷﾞ)	Bracket (right)			1
B158	MA60A6426	ｻｻｴｶﾅｸﾞ(ﾋﾀﾞﾘ)	Bracket (left)			1

C 本体関係（Ⅱ）
ARM BED AND IT'S ACCESSORIES（Ⅱ）

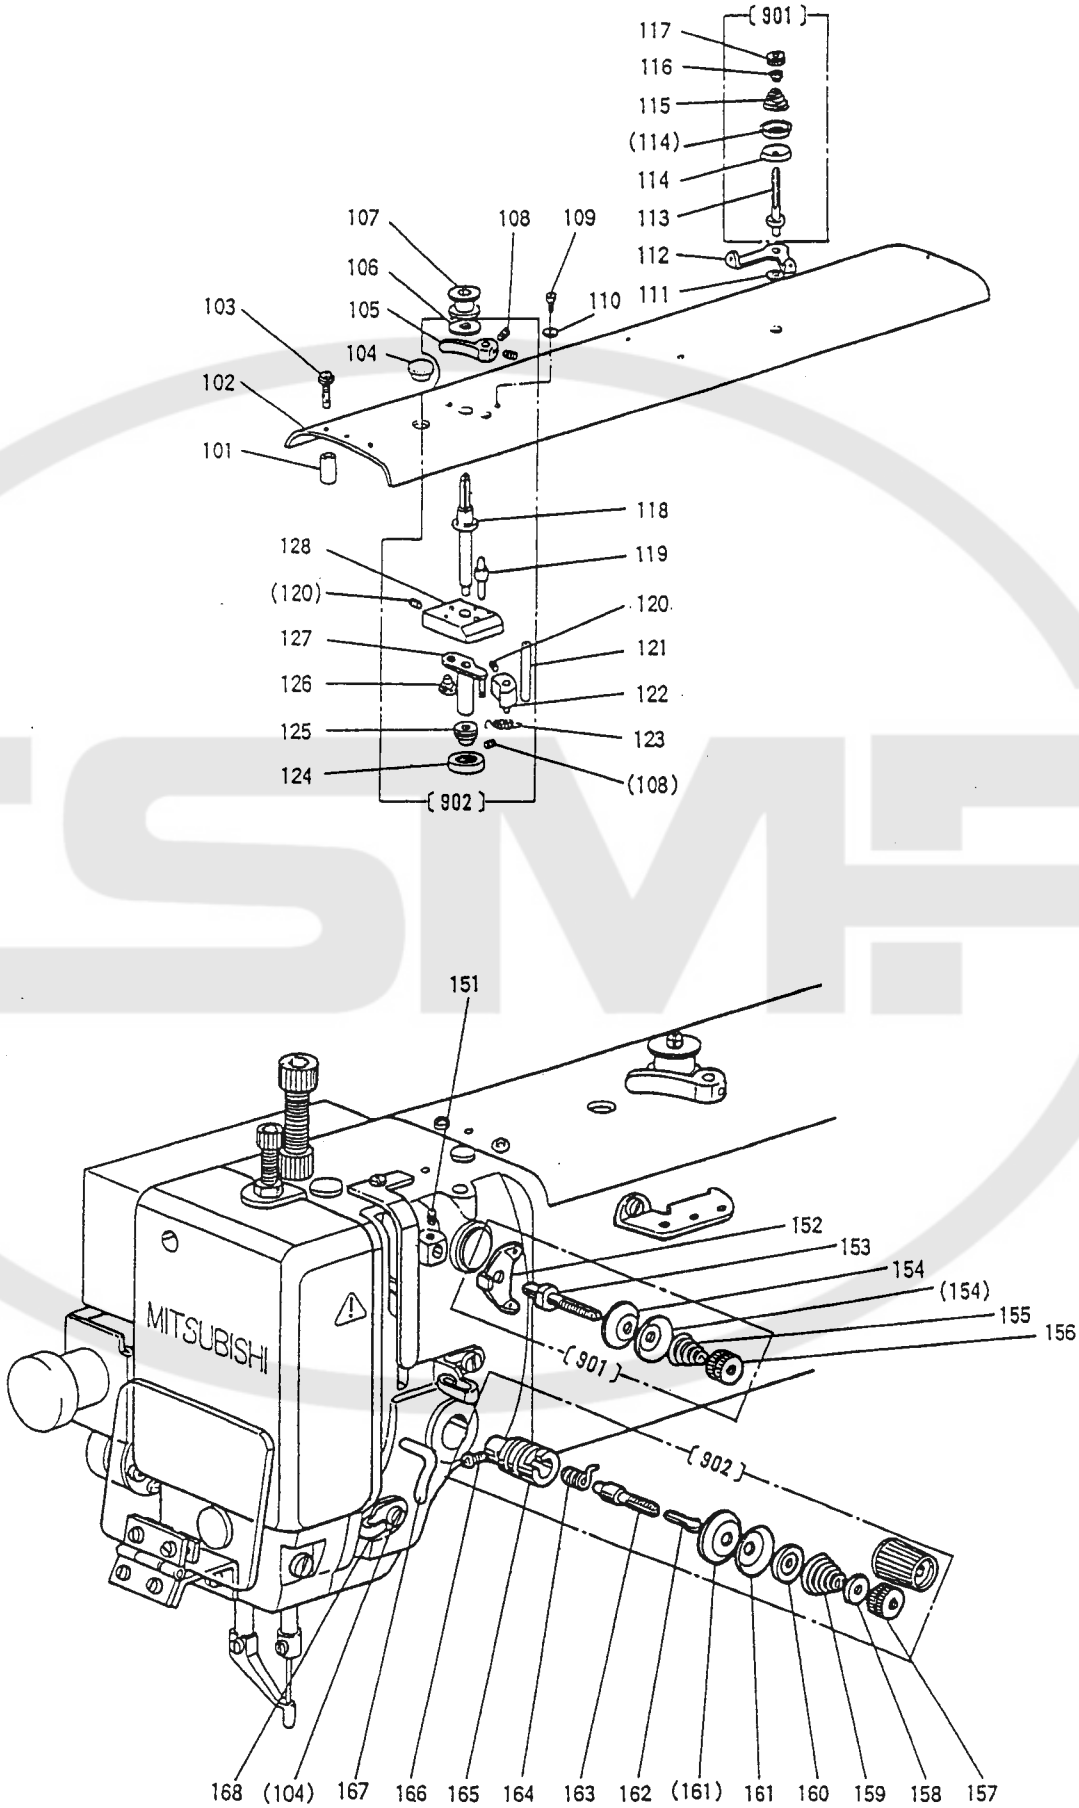

C 本体関係（Ⅱ）
ARM BED AND IT'S ACCESSORIES（Ⅱ）

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
C101	MB62A0352	ｽﾍﾟｰｻ	Spacer	5	5	5
C102	MB45A0600	ﾄｯﾌﾟｶﾊﾞｰ	Top cover	1	1	1
C103	M91276004	SW-PWﾂｷﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞM4×30	Screw M4×30	5	5	5
C104	M91910080	ｺﾞﾑｾﾝ	Rubber plug	1	1	1
C105	MA20A1950	ﾚﾊﾞｰ	Lever	1	1	1
C106	MA20A0476	ｽﾍﾟｰｻ	Spacer	1	1	1
C107	MA10A0123	ﾎﾞﾋﾞﾝ	Bobbin	1	1	1
C108	M91057020	ﾛｯｶｸｱﾅﾂｷﾄﾒﾈｼﾞM3×4	Screw M3×4	4	4	4
C109	M94002017	ｾﾌﾃｨｿｹｯﾄM4×8	Bolt M4×8	2	2	2
C110	M90421050	ｻﾞｶﾞﾈ4	Washer 4	3	3	3
C111	MG75A1476	ｽﾍﾟｰｻ	Spacer	1	1	1
C112	MS14A1180	ｲﾄｱﾝﾅｲ	Thread guide	1	1	1
C113	MS14A0553	ﾁｮｳｼﾎﾞｳ	Thread tension stud	1	1	1
C114	MF10A0555	ﾁｮｳｼｻﾞﾗ	Thread tension disc	2	2	2
C115	MM11A0245	ｴﾝｽｲﾊﾞﾈ	Thread tension spring	1	1	1
C116	MM11A0702	ﾊﾞﾈｱﾝﾅｲ	Spring guide	1	1	1
C117	M91602046	ﾂﾏﾐﾅｯﾄ	Thumb nut	1	1	1
C118	MA04A1530	ﾀﾞﾝﾂｷｼﾞｸ	Driven shaft	1	1	1
C119	MA04A2530	ﾀﾞﾝﾂｷｼﾞｸ	Shaft	1	1	1
C120	M91055020	ﾛｯｶｸｱﾅﾂｷﾄﾒﾈｼﾞM4×4	Screw M4×4	2	2	2
C121	M90601064	ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ6×56	Spring pin 6×56	1	1	1
C122	MS14A0350	ｶﾑ	Cam	1	1	1
C123	MS14A0572	ﾂﾙﾏｷﾊﾞﾈ	Helical spring	1	1	1
C124	MS03A0417	ｺﾞﾑﾜ	Tire	1	1	1
C125	MA20A0194	ｲﾄﾏｷｸﾞﾙﾏ	Wheel	1	1	1
C126	M99006063	ﾂﾊﾞﾂｷｼﾞｸ	Pin	1	1	1
C127	MB60E2750	ﾌﾞｯｼｭｸﾐﾀﾃ	Bushing assy	1	1	1
C128	MB60A1601	ﾄﾘｯｹﾀﾞｲ	Bracket	1	1	1
C151	M94006021	ﾛｯｶｸｱﾅﾂｷﾄﾒﾈｼﾞ M4×6	Screw M4×6	1	1	1
C152	MF90A0181	ｲﾄｱﾝﾅｲ(ﾌﾟﾘﾃﾝｼｮﾝ)	Thread guide	1	1	1
C153	MF90A0553	ﾁｮｳｼﾎﾞｳ	Thread tension stud	1	1	1
C154	MF10A1555	ﾁｮｳｼｻﾗ	Thread tension discs	2	2	2
C155	MF36A0245	ｴﾝｽｲﾊﾞﾈ	Thread tension spring	1	1	1
C156	M91101046	ﾂﾏﾐﾅｯﾄ	Thumb nut	1	1	1
C157	M91605045	ﾁｮｳｾﾂﾅｯﾄ	Thumb nut	1	1	1
C158	MT60A0802	ｶｲﾘﾄﾒ	Thumb nut revolution stopper	1	1	1
C159	MN52A1245	ｴﾝｽｲﾊﾞﾈ	Thread tension spring	1	1	1
C160	MM11A0556	ﾁｮｳｼｻﾗｵｻｴ	Thread tension releasing disc	1	1	1
C161	MF10A0555	ﾁｮｳｼｻﾗ	Thread tension discs	2	2	2
C162	M90204060	ﾋﾟﾝ	Thread tension releasing pin	1	1	1
C163	MF10A0553	ﾁｮｳｼﾎﾞｳ	Thread tension stud	1	1	1
C164	MF10A0187	ｲﾄﾄﾘﾘﾊﾞﾈ	Thread take-up spring	1	1	1
C165	MF10A0709	ﾌﾞｯｼｭ	Bushing	1	1	1
C166	M90901002	ﾋﾗﾈｼﾞ 9/64(40)×4	Screw 9/64(40)×4	1	1	1
C167	MF10A0181	ｲﾄｱﾝﾅｲ(ｼﾀ)	Thread guide	1	1	1
C168	MF70A1180	ｲﾄｱﾝﾅｲ	Thread guide	1	1	1
C901	MF00E0550	ﾁｮｳｾﾂｷ(ｸﾐ)(ﾌﾟﾘﾃﾝｼｮﾝ)	Pre-tension complete	1	1	1
C902	MA16E0210	ｳﾜｲﾄﾁｮｳｾﾂｷ(ｸﾐ)	Thread tension regulator	1	1	1

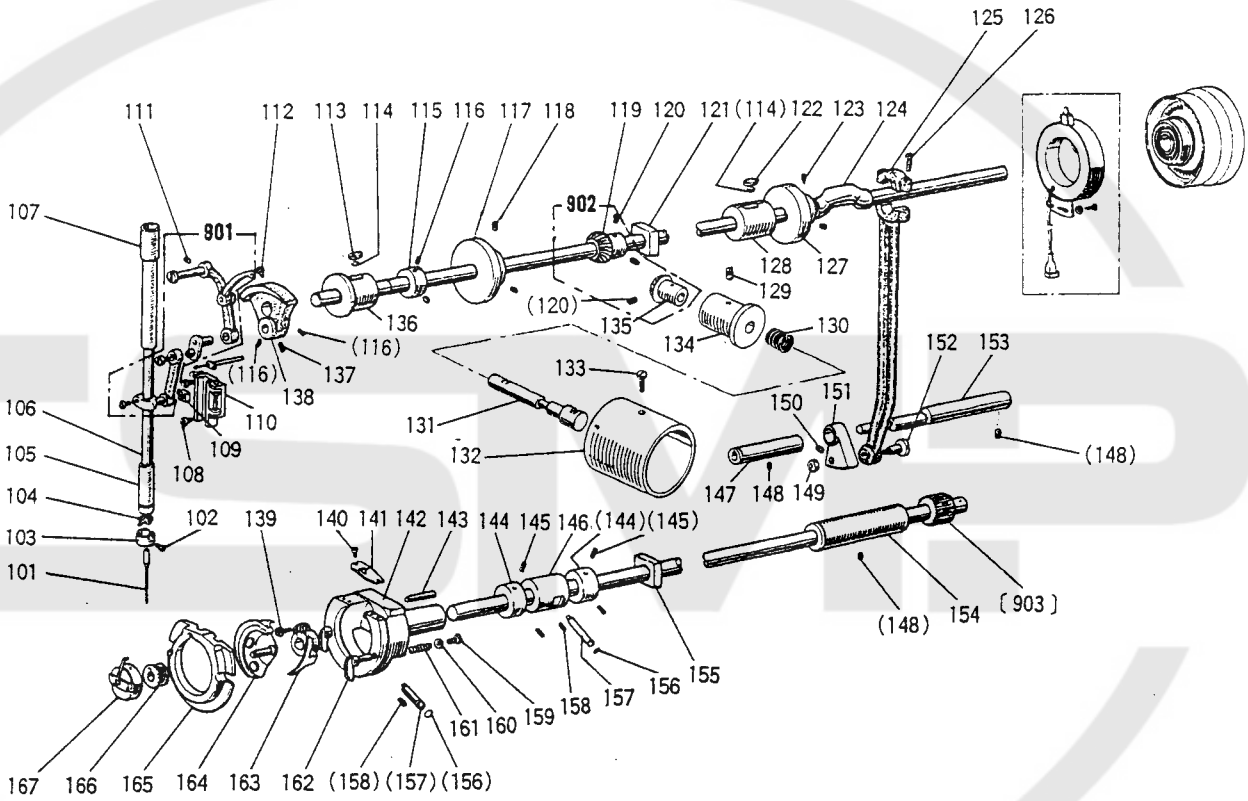
125 126
111 112 113 114 115 116 117 118 119 120 121 (114) 122 123 124
107
901
902
128 127
129
(120)
135
136
(116)
137
(116)
138
134
130
152 153
133
106
110
131
150 151
105
109
132
(148)
108
147 148 149
104
102 139 140 141 142 143 144 145 146 (144) (145)
103
101
(148) 154 〔903〕
155
156
157
158
159
161 160
167 166 165 164 163 162 (158) (157) (156)

D 縫い機構
SEWING MECHANISM

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
D102	M90815002	ﾋﾗﾈｼﾞ1/8(44)×4.5	Screw 1/8(44)×4.5	1	1	1
D103	MF21D0181	ｲﾄｱﾝﾅｲ	Thread guide	1	1	1
D104	MF01A0181	ｲﾄｱﾝﾅｲ	Thread guide	1	1	1
D105	MG30A0664	ﾊﾘﾎﾞｳﾒﾀﾙ(ｼﾀ)	Needle bar bushing (L)	1	1	1
D106	MS01A0660	ﾊﾘﾎﾞｳ	Needle bar	1	1	1
D107	MS01A0663	ﾊﾘﾎﾞｳﾒﾀﾙ(ｳｴ)	Needle bar bushing (U)	1	1	1
D108	M91110002	ﾋﾗﾈｼﾞ11/64(40)×8	Screw 11/64(40)×8	7	7	7
D109	MF10A0325	ｶｸｺﾏ	Square block	1	1	1
D110	MS03E0662	ﾊﾘｸｶﾞｲﾄﾞ(ｸﾐ)	Guide complete	1	1	1
D111	M91221001	ﾄﾒﾈｼﾞ M5×12	Screw M5×12	1	1	1
D112	M91802006	ﾎﾞｳｻｷﾋﾗﾈｼﾞ	Screw	1	1	1
D113	MA20A0740	ﾌｪﾙﾄ	Felt	1	1	1
D114	MS10A1740	ﾌｪﾙﾄ	Felt	2	2	2
D115	MF80A0352	ｶﾗｰ	Collar	1	1	1
D116	M91602001	ﾄﾒﾈｼﾞ1/4(40)×4	Screw 1/4(40)×4	2	2	2
D117	MS14A0682	ﾌﾟｰﾘｰ	Pulley	1	1	1
D118	M94006021	ﾛｸｶｸｱﾅﾂｷﾄﾒﾈｼﾞ M4×6	Screw M4×6	2	2	2
D119	MF40A0333	ｶｻﾊｸﾞﾙﾏ	Bevel gear	1	1	1
D120	M91606001	ｱﾀﾏﾅｼﾄﾒﾈｼﾞ1/4(40)×6	Screw 1/4(40)×6	4	4	4
D121	MA35A0833	ﾒﾀﾙ	Bushing	1	1	1
D122	MF60A2740	ﾌｪﾙﾄ	Felt	2	2	2
D123	M91607001	ﾄﾒﾈｼﾞ(40)×4	Screw (40)×4	2	2	2
D124	MB35A0230	ｳﾜｼﾞｸ	Arm shaft	1	1	1
D125	MB60E0956	ﾚﾝｾﾂｶﾝ	Connecting link	1	1	1
D126	M91203002	ﾋﾗﾈｼﾞ(28)×15	Screw (28)×15	2	2	2
D127	MS01A0350	ｲﾄｷﾘﾘｶﾑ	Thread trimmer cam	1	1	1
D128	MS10A0234	ｳﾜｼﾞｸﾒﾀﾙ(ﾅｶ)	Arm shaft bushing (M)	1	1	1
D129	M91224001	ﾄﾒﾈｼﾞ M5×8	Screw M5×8	2	2	2
D130	MA35A2572	ﾂﾙﾏｷﾊﾞﾈ	Spring	1	1	1
D131	MA35A3530	ﾀﾞﾝﾂｷｼﾞｸ	Shaft	1	1	1
D132	MA35A0682	ﾌﾟｰﾘ	Pulley	1	1	1
D133	M91502002	ﾋﾗﾈｼﾞ(28)×12	Screw (28)×12	4	4	4
D134	MB35A0833	ﾒﾀﾙ	Bushing	1	1	1
D135	MF40A0331	ｶｻﾊｸﾞﾙﾏ(ｳﾜｼﾞｸ)	Bevel gear for arm shaft	1	1	1
D136	MS10A0232	ｳﾜｼﾞｸﾒﾀﾙ(ﾋﾀﾞﾘ)	Arm shaft bushing (L)	1	1	1
D137	M91606001	ｱﾀﾏﾅｼﾄﾒﾈｼﾞ1/4(40)×6	Screw 1/4(40)×6	1	1	1
D138	MS01A0383	ｸﾗﾝｸ	Crank	1	1	1
D139	M95001021	ﾛｸｶｸｱﾅﾂｷﾎﾞﾙﾄ M5×16	Bolt M5×16	1	1	1
D140	M90853002	ﾋﾗﾈｼﾞ1/8(40)×4	Screw 1/8(40)×4	2	2	2
D141	MS01A0329	ｶﾏｲﾄｱﾝﾅｲ	Thread guide	1	1	1
D142	MS01A0121	ｿﾄｶﾞﾏ	Outer hook	1	1	1
D143	M90001060	ﾍｲｺｳﾋﾟﾝ 6-4×18	Pin m6-4×18	1	1	1
D144	MM11A0352	ｶﾗｰ	Collar	1	1	1
D145	M91503001	ﾄﾒﾈｼﾞ 15/64(28)×4.5	Screw 15/64(28)×6	4	4	4
D146	MB62A0453	ｼﾀｼﾞｸﾒﾀﾙ(ﾅｶ)	Hook shaft bushing (middle)	1	1	1
D147	MS01A0833	ﾒﾀﾙ	Bushing	1	1	1
D148	M91222001	ﾄﾒﾈｼﾞ M5×6	Screw M5×6	3	3	3
D149	M91802045	ﾅｯﾄ	Nut	1	1	1
D150	M95004021	ﾛｸｶｸｱﾅﾂｷﾄﾒﾈｼﾞ M5×5	Screw M5×5	1	1	1
D151	MS01A0508	ｾｸﾀﾊｸﾞﾙﾏ	Sector gear	1	1	1
D152	M98003015	ﾀﾞﾝﾂｷﾋﾗﾈｼﾞ M8	Screw M8	1	1	1
D153	MS01A0891	ﾖｳﾄﾞｳｼﾞｸ	Rock shaft	1	1	1
D154	MS03A8833	ﾒﾀﾙ	Hook shaft bushing	1	1	1
D155	MA35A1833	ﾒﾀﾙ	Bushing	1	1	1
D156	M90500085	Oﾘﾝｸﾞ	O-ring	2	2	2
D157	MS01A0761	ﾍﾝｼﾝｼﾞｸ	Eccentric shaft	2	2	2
D158	M96002020	ｸﾎﾞﾐｻｷﾄﾒﾈｼﾞ M6×6	Screw M6×6	2	2	2
D159	M90802003	ﾏﾙﾋﾗﾈｼﾞ1/8(44)×4.5	Screw 1/8(44)×4.5	2	2	2
D160	M93006050	ｻﾞｶﾞﾈ	Washer	2	2	2
D161	MS01A0572	ﾂﾙﾏｷﾊﾞﾈ	Spring	2	2	2
D162	MS09A0950	ｶﾏｵｻｴﾂﾏﾐ	Hook clamp	2	2	2
D163	MS01A0611	ﾄﾞﾗｲﾊﾞｰ	Hook driver	1	1	1
D164	MA10A0120	ﾅｶｶﾞﾏ	Inner hook	1	1	1
D165	MS01A0616	ﾅｶｶﾞﾏｵｻｴ	Hook retainer	1	1	1
D166	MA10A0123	ﾎﾞﾋﾞﾝ	Bobbin	1	1	1
D167	MS17A0125	ﾎﾞﾋﾞﾝｹｰｽ	Bobbin case	1	1	1
D901	MS01E0580	ﾃﾝﾋﾞﾝﾊﾘｸ(ｸﾐ)	Thread take-up lever complete	1	1	1
D902	MF01E0331	ｶｻﾊｸﾞﾙﾏ(ｸﾐ)	Bevel gear (assy.)	1	1	1
D903	MA35E0450	ｼﾀｼﾞｸ(ｸﾐ)	Hook shaft complete	1	1	1

E 中押え機構
PRESSER BAR LIFTING MECHANISM

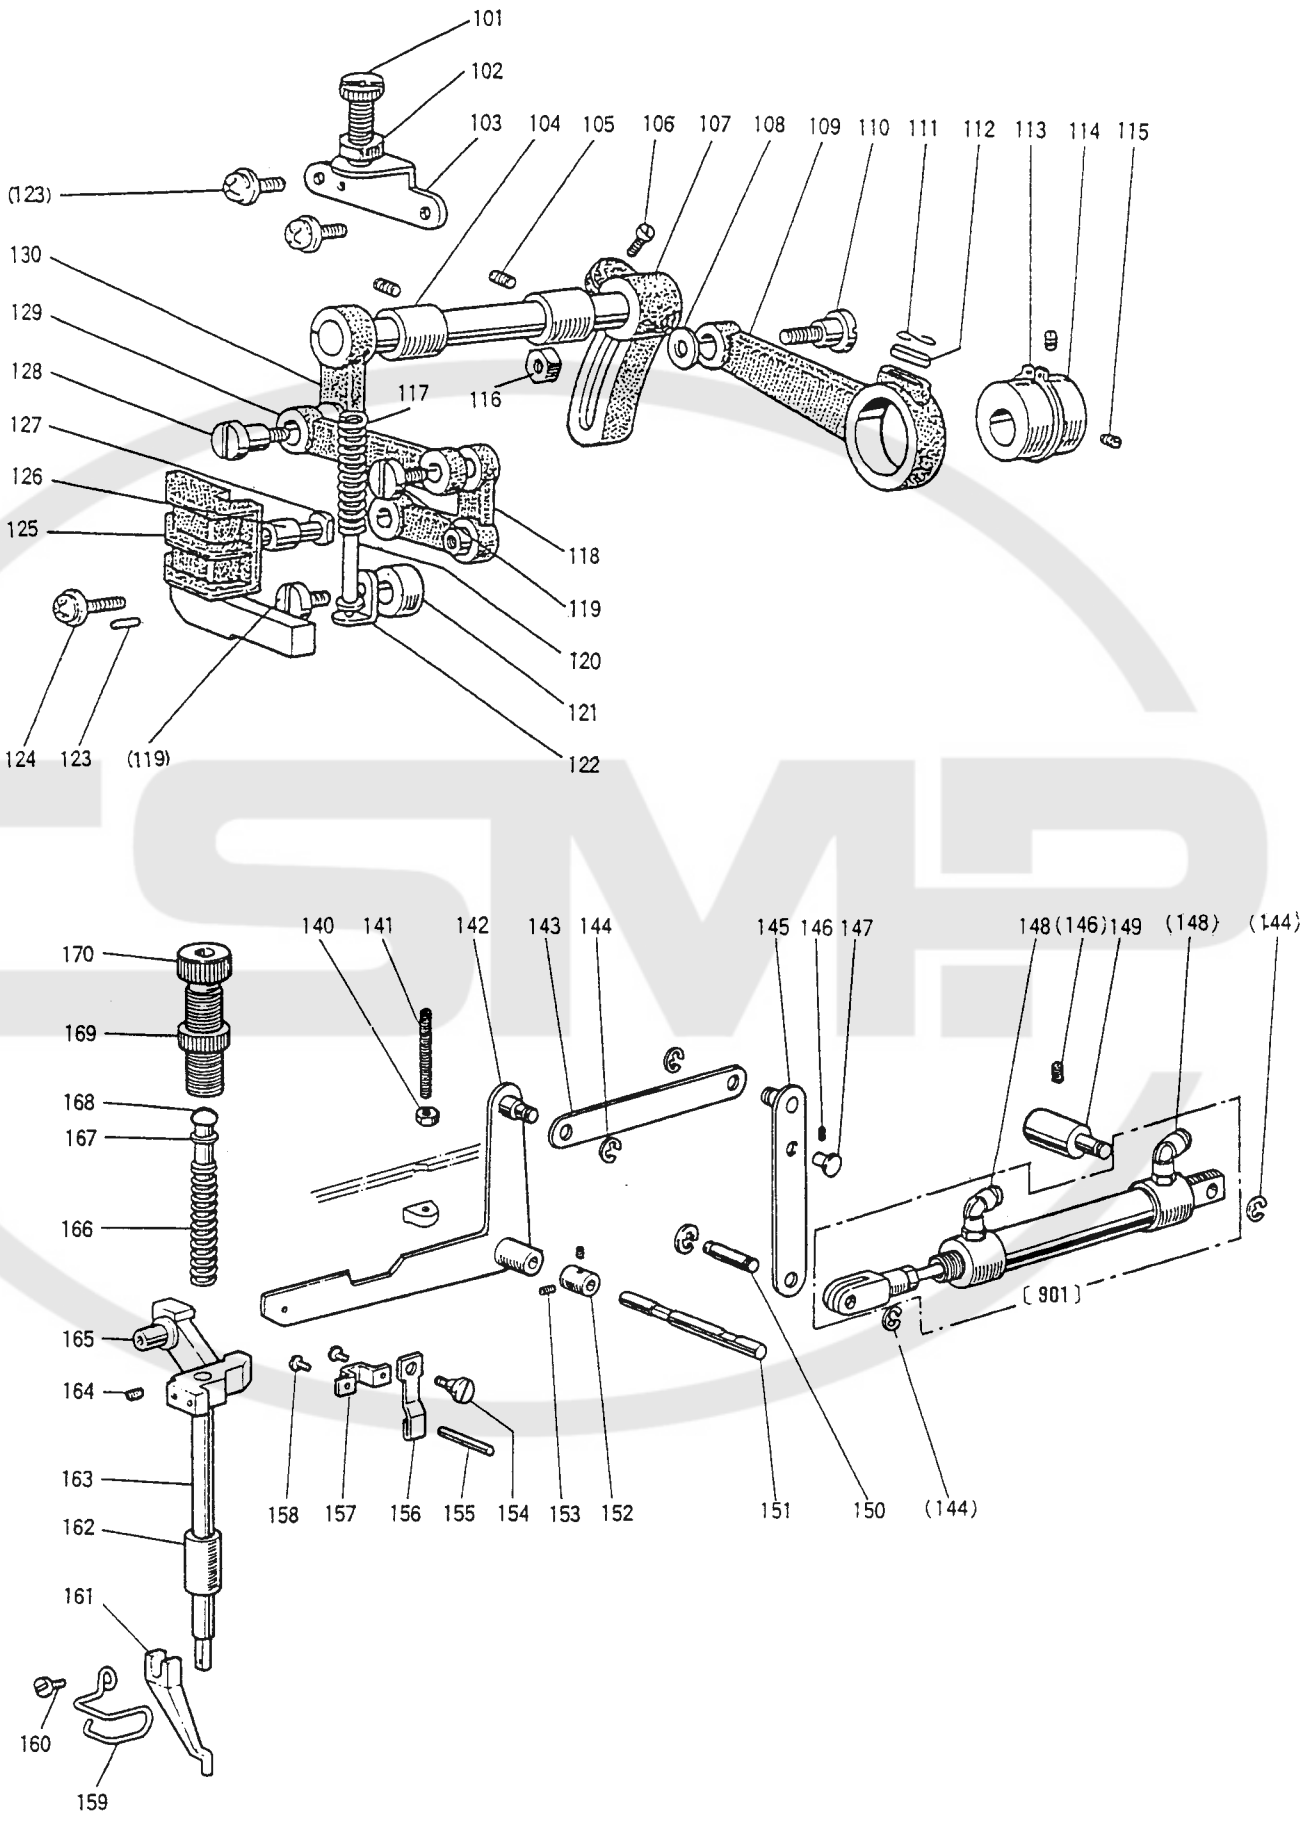

E 中押え機構
PRESSER BAR LIFTING MECHANISM

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
E101	M91801035	ﾁｮｳｾﾂﾈｼﾞ9/32(28)×35	Adjusting screw 9/32(28)	1	1	1
E102	M91802045	ﾅｯﾄ9/32(28)	Nut 9/32(28)	1	1	1
E103	MG30B1261	ｵｻｴﾁｮｳｾﾂﾂﾞｲ	Presser regulating bracket	1	1	1
E104	MG30A0833	ｼﾞｮｳﾌﾞｼﾞｮｳｹﾞﾒﾀﾙ	bushing	2	2	2
E105	M94006021	ﾛｯｶｸｱﾅﾂｷﾄﾒﾈｼﾞM4×6	Screw M4×6	2	2	2
E106	M91603003	ﾏﾙﾋﾗﾈｼﾞ1/4(40)×16	Screw 1/4(40)×16	1	1	1
E107	MS02A0463	ｼﾞｮｳﾌﾞｼﾞｮｳｹﾞｵｸﾘｳﾃﾞ(ﾐｷﾞ)	Foot lifting rock shaft crank	1	1	1
E108	M90631050	ｻﾞｶﾞﾈ6	Washer 6	1	1	1
E109	MG30B0384	ｸﾗﾝｸﾛｯﾄﾞ	Crank rod	1	1	1
E110	M91551015	ﾄｸｼｭﾎﾞﾙﾄ	Special bolt	1	1	1
E111	MF60A0700	ｾﾝｻｲｸﾊﾞﾈ	Spring	1	1	1
E112	MG30B0740	ﾌｪﾙﾄ	Felt	1	1	1
E113	M90325065	Cｶﾞﾀﾄﾒﾜ25	C-type snap ring 25	1	1	1
E114	MG30A0760	ﾍﾝｼﾝﾘﾝ	Foot lifting eccentric	1	1	1
E115	M91606001	ｱﾀﾏﾅｼﾄﾒﾈｼﾞ1/4(40)×6	Screw 1/4(40)×6	2	2	2
E116	M91572045	Uﾅｯﾄ6×0.75	U-nut 6×0.75	1	1	1
E117	MS03A2572	ﾂﾙﾏｷﾊﾞﾈ	Spring	1	1	1
E118	MG10B0763	ﾍﾞﾙｸﾗﾝｸ	Bell crank	1	1	1
E119	M91210002	ﾋﾗﾈｼﾞ3/16(28)×10	Screw 3/16(28)×10	2	2	2
E120	MS03A6154	ｱﾝﾅｲｶﾞﾈｸﾐﾀﾃ	Spring guide bar assy	1	1	1
E121	MS02A2352	ｶﾗｰ	Collar	1	1	1
E122	MG30B0226	ｵｻｴｲﾀｻｻｴ	Guide bar adapter	1	1	1
E123	M90301064	ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ3×8	Spring pin 3×8	2	2	2
E124	M91054004	SW-PWﾂｷﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞM4×8	Screw M4×8	4	4	4
E125	MS05A0765	ﾍﾞﾙｸﾗﾝｸｶﾞｲﾄﾞ	Bell crank guide	1	1	1
E126	MG10B0411	ｺﾛ	Roller	1	1	1
E127	M90507063	ｺﾛｼﾞｸ	Bell crank guide pin	1	1	1
E128	M91681015	ﾀﾞﾝﾂｷﾋﾗﾈｼﾞ1/4(40)×12	Screw 1/4(40)×12	1	1	1
E129	MG10B0910	ﾚﾝｾﾂｶﾝ	Link	1	1	1
E130	MS02E0460	ｼﾞｮｳﾌﾞｼﾞｮｳｹﾞｳﾃﾞｸﾐﾀﾃ(ﾋﾀﾞﾘ)	Foot lifting rock shaft assy	1	1	1
E140	M92075045	ﾅｯﾄ M8	Nut M8	1	1	1
E141	M98012021	ﾛｯｶｸｱﾅﾂｷﾄﾒﾈｼﾞ M8×55	Screw M8×55	1	1	1
E142	MA35A0252	ｵｻｴｱｹﾞﾚﾊﾞｰ	lifting lever	1	1	1
E143	MA35A0910	ﾘﾝｸ	Link	1	1	1
E144	M90511065	Eｶﾞﾀﾄﾒﾜ6	E-Type retaining ring 6	4	4	4
E145	MA35A0950	ﾚﾊﾞｰ	Lever	1	1	1
E146	M91222001	ﾄﾒﾈｼﾞ M5×6	Screw M5×6	2	2	2
E147	MA35A0530	ﾀﾞﾝﾂｷｼﾞｸ	Holder	1	1	1
E148	MA20A0571	ﾜﾝﾀｯﾁﾂｷﾞﾃ	Connector	2	2	2
E149	MA35A1530	ﾀﾞﾝﾂｷｼﾞｸ	Shaft	1	1	1
E150	M99009063	ﾋﾟﾝ	Pin	1	1	1
E151	MA20A0454	ｼﾞｸ	Shaft	1	1	1
E152	MA20A1352	ｶﾗｰ	Collar	1	1	1
E153	M91503001	ﾄﾒﾈｼﾞ15/64(28)×4.5	Screw 15/64(28)×4.5	2	2	2
E154	M91225015	ﾀﾞﾝﾂｷﾋﾗﾈｼﾞ3/16(28)×5.5	Screw 3/16(28)×5.5	1	1	1
E155	M90415060	ｲﾄﾕﾙﾒﾋﾟﾝ	Thread releasing pin	1	1	1
E156	MG30B1222	ｲﾄﾕﾙﾒ	Thread releasing cam	1	1	1
E157	MG30A0154	ｱﾝﾅｲｶﾞﾈ	Guide plate	1	1	1
E158	M91058004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×6	Screw M4×6	2	2	2
E159	MB62A0626	ﾆｰﾄﾞﾙｶﾞｰﾄﾞ	Finger protector	1	1	1
E160	M90922002	ﾋﾗﾈｼﾞ9/64(40)×8	Screw 9/64(40)×8	1	1	1
E161	MV30A0256	ﾅｶｵｻｴ(φ3)	Presser foot (φ3)	1	1	1
E162	MF10A0267	ｵｻｴﾎﾞｳﾒﾀﾙ	Presser bar bushing	1	1	1
E163	MS03A0262	ｵｻｴﾎﾞｳ	Presser bar	1	1	1
E164	M91506001	ｱﾀﾏﾅｼﾄﾒﾈｼﾞ15/64(28)×7	Screw 15/64(28)×7	1	1	1
E165	MG10B0265	ｵｻｴﾎﾞｳﾀﾞｷ	Presser bar holder	1	1	1
E166	MS03A1572	ｵｻｴﾊﾞﾈ	Presser bar spring	1	1	1
E167	M90632050	ｺｻﾞｶﾞﾈ6	Washer 6	1	1	1
E168	MS03A0703	ｱﾝﾅｲﾎﾞｳ	Presser bar guide	1	1	1
E169	M93202047	ﾄｸｼｭﾅｯﾄ1/2(28)	Special nut 1/2(28)	1	1	1
E170	M93220035	ﾂﾏﾐﾈｼﾞ1/2(28)×43	Thumb screw 1/2(28)×43	1	1	1
E901	MA20E0434	ｴｱｼﾘﾝﾀﾞｸﾐﾀﾃ	Air cylinder assy.	1	1	1

F 糸切り機構
THREAD TRIMMING MECHANISM

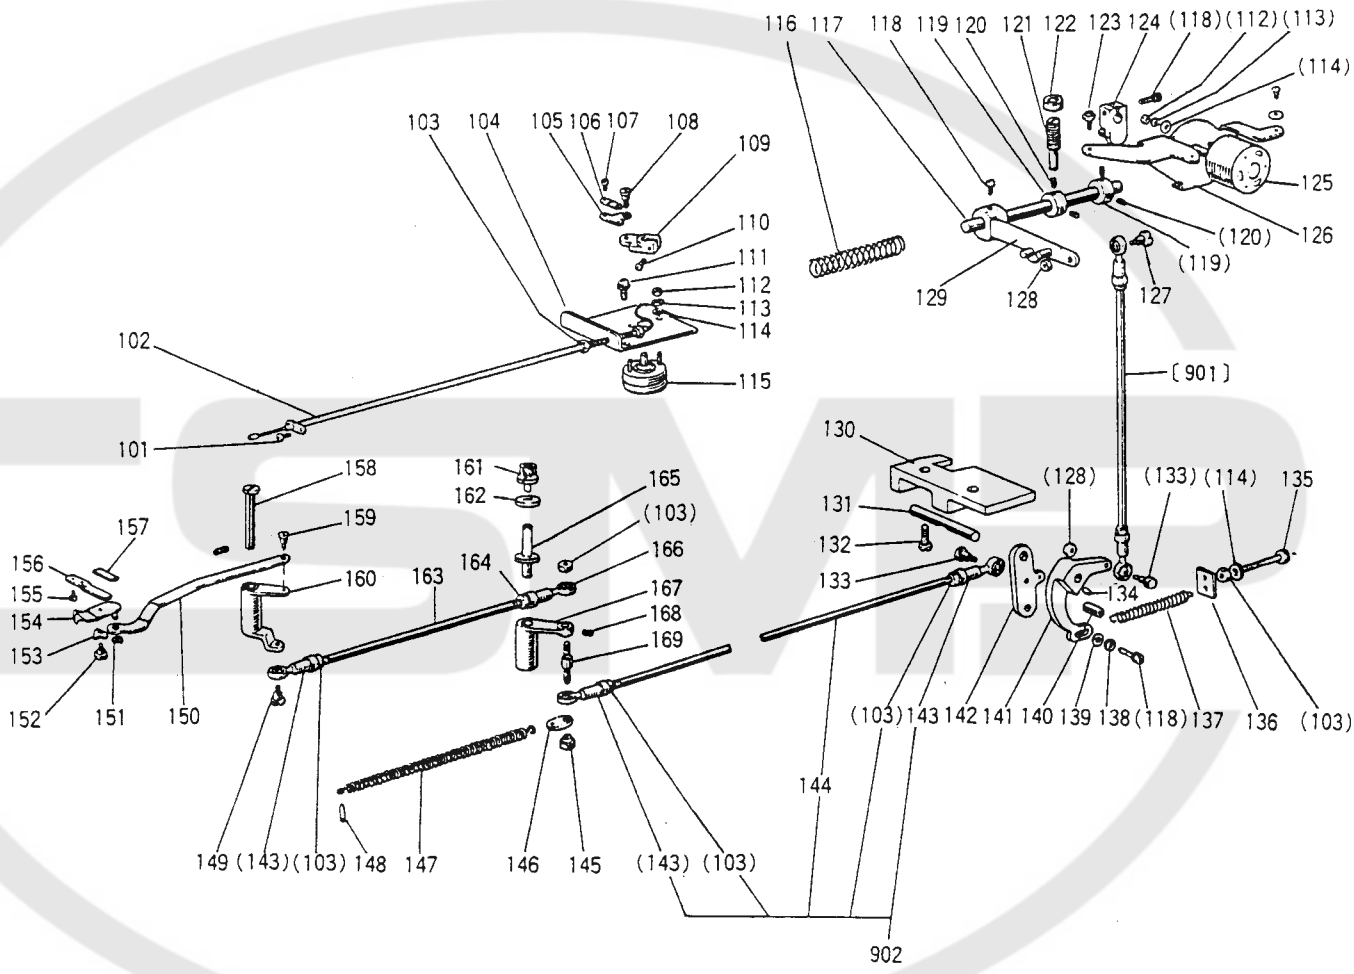

F 糸切り機構
THREAD TRIMMING MECHANISM

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
F101	M91054004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞM4×8	Screw M4×8	1	1	1
F102	MA35E0746	ﾌﾚｷｼﾌﾞﾙﾜｲﾔ(ｸﾐ)	Flexible wire (complete)	1	1	1
F103	M91379045	ﾅｯﾄ M5	Nut M5	7	7	7
F104	MA20A0603	ｿﾚﾉｲﾄﾞﾄﾘｯｹﾀﾞｲ	Solenoid adapter	1	1	1
F105	MF90A0361	ｶｹｶﾞﾈ	Bracket	1	1	1
F106	MF36A0750	ﾌﾞｯｼｭ	Holder	1	1	1
F107	M90802002	ﾋﾗﾈｼﾞ1/8(44)×7	Screw 1/8(44)×7	2	2	2
F108	M91127015	ﾀﾞﾝﾂｷﾋﾗﾈｼﾞ11/64(40)	Screw 11/64(40)	1	1	1
F109	MS07A0228	ｳﾃﾞ	Crank	1	1	1
F110	M91112002	ﾋﾗﾈｼﾞ11/64(40)×12	Screw 11/64(40)×12	1	1	1
F111	M91067004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M5×10	Screw M5×10	2	2	2
F112	M91002045	ﾅｯﾄ M4	Nut M4	4	4	4
F113	M90401053	ﾊﾞﾈｻﾞｶﾞﾈ 4	Spring washer 4	4	4	4
F114	M90450050	ｻﾞｶﾞﾈ 4	Washer 4	5	5	5
F115	MB60E5519	ﾛｰﾀﾘｿﾚﾉｲﾄﾞｸﾐﾀﾃ(ｲﾄﾕﾙﾒ)	Rotary solenoid assy	1	1	1
F116	MS01A1572	ﾂﾙﾏｷｷﾊﾞﾈ	Spring	1	1	1
F117	MS01A0348	ｶﾑｼﾞｸ	Shaft	1	1	1
F118	M95003021	ﾛｸｶｸｱﾅﾂｷﾎﾞﾙﾄ M5×12	Bolt M5×12	1	1	1
F119	MS01A3352	ｶﾗｰ	Collar	2	2	2
F120	M95004021	ﾛｸｶｸｱﾅﾂｷﾄﾒﾈｼﾞ M5×5	Screw M5×5	4	4	4
F121	M91608005	ﾎﾞｳｻｷﾄﾒﾈｼﾞ15/64(28)×32	Screw 15/64(28)×32	1	1	1
F122	M91503045	ﾅｯﾄ15/64(28)	Nut15/64(28)	1	1	1
F123	M91056004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×10	Screw M4×10	3	3	3
F124	MS01E0430	ｲﾄｷﾘｻﾄﾞｳｳﾃﾞ	Crank complete	1	1	1
F125	MB60E2519	ﾛｰﾀﾘｿﾚﾉｲﾄﾞｸﾐﾀﾃ(ｲﾄｷﾘ)	Rotary solenoid assy	1	1	1
F126	MS14A3601	ｿﾚﾉｲﾄﾞﾄﾘｯｹｲﾀ	Solenoid adapter	1	1	1
F127	M91101015	ﾀﾞﾝﾂｷﾋﾗﾈｼﾞ11/64(40)	Screw 11/64(40)	1	1	1
F128	M91104045	ﾅｯﾄ11/64(40)	Screw 11/64(40)	1	1	1
F129	MS01E0351	ｶﾑﾂｲｼﾞｭｳｳﾃﾞｸﾐﾀﾃ	Cam follower assy	1	1	1
F130	MS14A3603	ﾄﾘｯｹﾀﾞｲ	Bracket	1	1	1
F131	MS01A4454	ｼﾞｸ	Shaft	1	1	1
F132	M96062021	ﾛｯｶｸｱﾅﾂｷﾎﾞﾀﾝﾎﾞﾙﾄ M6×12	Bolt M6×12	2	2	2
F133	M90101017	ﾀﾞﾝﾂｷﾎﾞﾙﾄ11/64(40)	Bolt 11/64(40)	2	2	2
F134	M91108001	ﾄﾒﾈｼﾞ11/64(40)×5.5	Screw 11/64(40)×5.5	1	1	1
F135	M91082004	ﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×45	Screw M4×45	1	1	1
F136	MB35A0708	ﾊﾞﾈｶｹｲﾀ	Spring holder	1	1	1
F137	MA35A0572	ﾂﾙﾏｷﾊﾞﾈ	Spring	1	1	1
F138	M90501053	ﾊﾞﾈｻﾞｶﾞﾈ 5	Spring washer 5	1	1	1
F139	M90550050	ｻﾞｶﾞﾈ 5	Washer 5	1	1	1
F140	M91109045	ﾅｯﾄ11/64(40)	Nut 11/64(40)	1	1	1
F141	MS01A1392	ﾒｽｸﾄﾞｳｳﾃﾞ	Knife driving crank	1	1	1
F142	MS01A2392	ﾒｽｸﾄﾞｳｳﾃﾞ	Knife driving crank	1	1	1
F143	MN55A0975	ﾛｯﾄﾞｴﾝﾄﾞ	Ball joint	2	2	2
F144	M90507023	ｳｴｺﾐﾎﾞﾙﾄ	Stud bolt	1	1	1
F145	M91383045	ﾅｯﾄ M5	Nut M5	1	1	1
F146	MA35A0708	ﾊﾞﾈｶｹ	Hook	1	1	1
F147	MA35A1572	ﾂﾙﾏｷﾊﾞﾈ	Spring	1	1	1
F148	M94002067	ﾐｿﾞﾂｷﾋﾟﾝ	Pin	1	1	1
F149	M91101017	ﾀﾞﾝﾂｷﾎﾞﾙﾄ11/64(40)	Screw 11/64(40)	1	1	1
F150	MA20A1910	ﾘﾝｸ	Link	1	1	1
F151	M90513065	Eｶﾞﾀﾄﾒﾜ2.5	Snap ring 2.5	1	1	1
F152	M91129015	ﾀﾞﾝﾂｷﾋﾗﾈｼﾞ11/64(40)	Screw 11/64(40)	1	1	1
F153	M96004052	ｻﾞｶﾞﾈ 6	Wave washer 6	1	1	1
F154	MS03B0838	ｲﾄﾞｳﾒｽ(ｸﾐ)	Movable knife complete	1	1	1
F155	M90906003	ﾏﾙﾋﾗﾈｼﾞ9/64(40)×3.2	Screw 9/64(40)×3.2	2	2	2
F156	MS14A0838	ｺﾃｲﾒｽ	Fixed knife	1	1	1
F157	MA10B2476	ｽﾍﾟｰｻ(ﾒｽﾖｳ)	Spacer	1	1	1
F158	MB62A0454	ﾂﾊﾞﾂｷｼﾞｸ	Stepped pin	1	1	1
F159	M91214015	ﾀﾞﾝﾂｷﾋﾗﾈｼﾞ3/16(28)	Screw 3/16(28)	1	1	1
F160	MA20A0392	ﾒｽｸﾄﾞｳｳﾃﾞ	Knife driving crank	1	1	1
F161	M94002017	ｾﾌﾃｨｿｹﾂﾄ M4×8	Bolt M4×8	1	1	1
F162	M90421050	ｻﾞｶﾞﾈ 4	Washer 4	1	1	1
F163	M95004023	ｳｴｺﾐﾎﾞﾙﾄ	Stud bolt	1	1	1
F164	M91374045	ﾅｯﾄ (ﾋﾀﾞﾘM5)	Nut M5 (left)	1	1	1
F165	MA20A4454	ﾂﾊﾞﾂｷｼﾞｸ	Stepped pin	1	1	1
F166	MN72A0975	ﾛｯﾄﾞｴﾝﾄﾞ(ﾋﾀﾞﾘ)	Ball joint	1	1	1
F167	MA35A1950	ﾚﾊﾞｰ	Lever	1	1	1
F168	M91050020	ﾄｸｶｸｱﾅﾂｷﾄﾒﾈｼﾞ M4×5	Screw M4×5	1	1	1
F169	MA35A2530	ﾀﾞﾝﾂｷｼﾞｸ	Shaft	1	1	1
F901	MS01E0975	ﾛｯﾄﾞｴﾝﾄﾞｸﾐﾀﾃ	Connecting link assy	1	1	1
F902	MB35E0975	ﾛｯﾄﾞｴﾝﾄﾞｸﾐﾀﾃ	Connecting link assy	1	1	1

G X-Y テーブル機構（Ⅰ）
X-Y TABLE MECHANISM（Ⅰ）

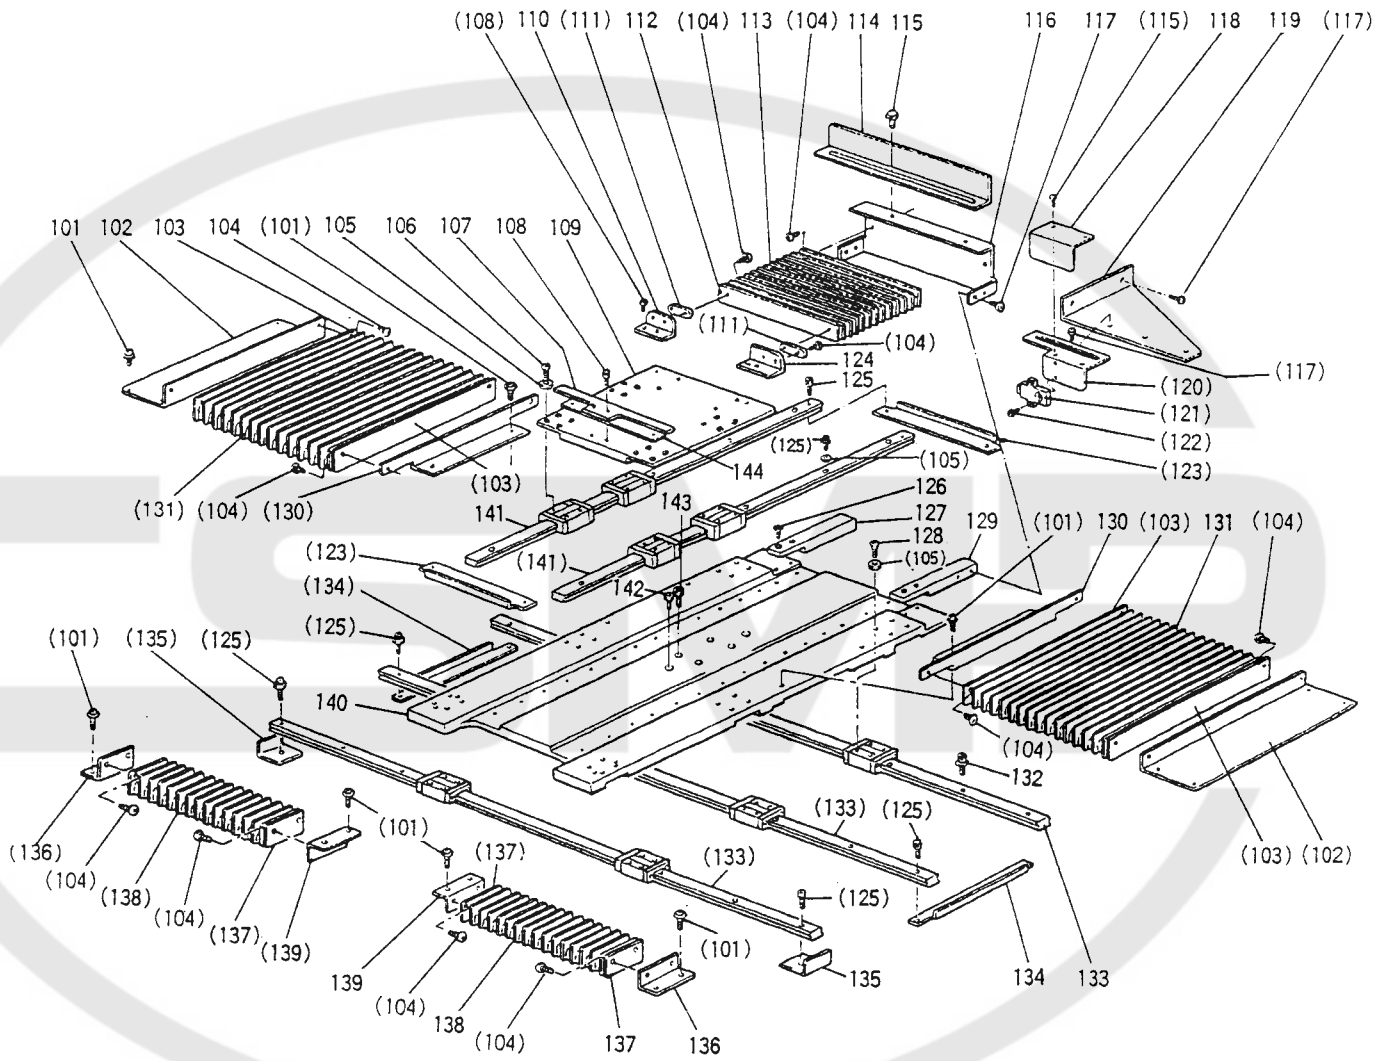

G X-Yテーブル機構（Ⅰ）
X-Y TABLE MECHANISM（Ⅰ）

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
G101	M91058004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×6	Screw M4×6	12	12	12
G102	MA35A0226	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter	2		
G102	MA60A0226	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter		2	2
G103	MA60A1226	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter	4	4	4
G104	M90859004	ﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M3×16	Screw M3×16	20	20	20
G105	M90317050	ｻﾞｶﾞﾈ 3	Washer 3	73	73	73
G106	M94012017	ｾﾌﾃｨｿｹｯﾄ M4×8	Bolt M4×8	24	24	24
G107	MA35A1361	ｲﾁｷﾞﾒｶﾅｸﾞ	Guide plate	1	1	1
G108	M94002017	ｾﾌﾃｨｿｹｯﾄ M4×8	Bolt M4×8	6	6	6
G109	MA60A0957	Yｼﾞｸｲﾄﾞｳﾚｰｽ	Y-movable race	1	1	1
G110	MB65A0228	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter	1	1	1
G111	MA35B0601	ﾄﾘﾂｹｲﾀ	Adapter	2	2	2
G112	MA35A4601	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter	2	2	2
G113	MA35A0458	ｼﾞｬﾊﾞﾗ	Shutter	1	1	1
G114	MB35A0407	Xｼﾞｸｹﾝｼｭﾂｲﾀ	Detector plate (X)	1	1	
G114	MB65A0407	Xｼﾞｸｹﾝｼｭﾂｲﾀ	Detector plate (X)			1
G115	M90859004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M3×6	Screw M3×6	4	4	4
G116	MB35A4601	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter	1	1	1
G117	M91054004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×8	Screw M4×8	10	10	10
G118	MB35A1339	ｶﾊﾞｰ	Cover	1	1	1
G119	MB35A5601	ﾄﾘﾂｹｲﾀ	Adapter	1	1	1
G120	MB35A1601	ｹﾝｼｭﾂｷﾄﾘﾂｹｲﾀ	Detector holder	1	1	1
G121	MB60A0406	ｷﾝｾﾂｽｲｯﾁ	Detector	1	1	1
G122	M90864004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M3×14	Screw M3×14	3	3	3
G123	MA35A1477	Yｼﾞｸｽﾄｯﾊﾟ	Y-stopper	2	2	2
G124	MA60A3226	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter	1	1	1
G125	M94003017	ｾﾌﾃｨｿｹｯﾄ M3×6	Bolt M3×6	28	28	28
G126	M91062004	ﾌﾟﾗﾏｲｻﾗﾈｼﾞ M4×10	Screw M4×10	4	4	4
G127	MA35A0602	ﾄﾘﾂｹｶﾞﾈ	Adapter	1	1	1
G128	M94012017	ｾﾌﾃｨｿｹｯﾄ M3×8	Bolt M3×8	24	24	24
G129	MA35A1602	ﾄﾘﾂｹｶﾞﾈ	Adapter	1	1	1
G130	MA60A4226	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter	2	2	2
G131	MA35A2458	ｼﾞｬﾊﾞﾗ	Shutter	2	2	
G131	MA60A0458	ｼﾞｬﾊﾞﾗ	Shutter			2
G132	M94005017	ｾﾌﾃｨｿｹｯﾄ M3×10	Bolt M3×10	61	61	61
G133	MA35A6920	Xｼﾞｸﾘﾆｱｳｴｲ	X-linear way	3	3	
G133	MA60A4920	Xｼﾞｸﾘﾆｱｳｴｲ	X-linear way			3
G134	MA60A0477	Xｼﾞｸｽﾄｯﾊﾟ	X-stopper	2	2	2
G135	MA35A3477	Xｼﾞｸｽﾄｯﾊﾟ	X-stopper	2	2	2
G136	MA35A1228	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter	2		
G136	MA60A5226	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter		2	2
G137	MA60A6226	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter	4	4	4
G138	MA35A3458	ｼﾞｬﾊﾞﾗ	Shutter	2	2	2
G139	MA60A7226	ｼﾞｬﾊﾞﾗﾄﾘﾂｹｲﾀ	Shutter adapter	2	2	2
G140	MB35A0957	Xｼﾞｸｲﾄﾞｳﾚｰｽ	X-movable race	1	1	1
G141	MA35A7920	Yｼﾞｸﾘﾆｱｳｴｲ	Y-linear way	2	2	2
G142	M94008017	ｾﾌﾃｨｿｹｯﾄM4×6	Bolt M4×6	2	2	2
G143	M94001017	ｾﾌﾃｨｿｹｯﾄM4×10	Bolt M4×10	4	4	4
G144	MA60A1476	ｽﾍﾟｰｻ	Spacer	1	1	1

H X-Y テーブル機構（Ⅱ）
X-Y TABLE MECHANISM（Ⅱ）

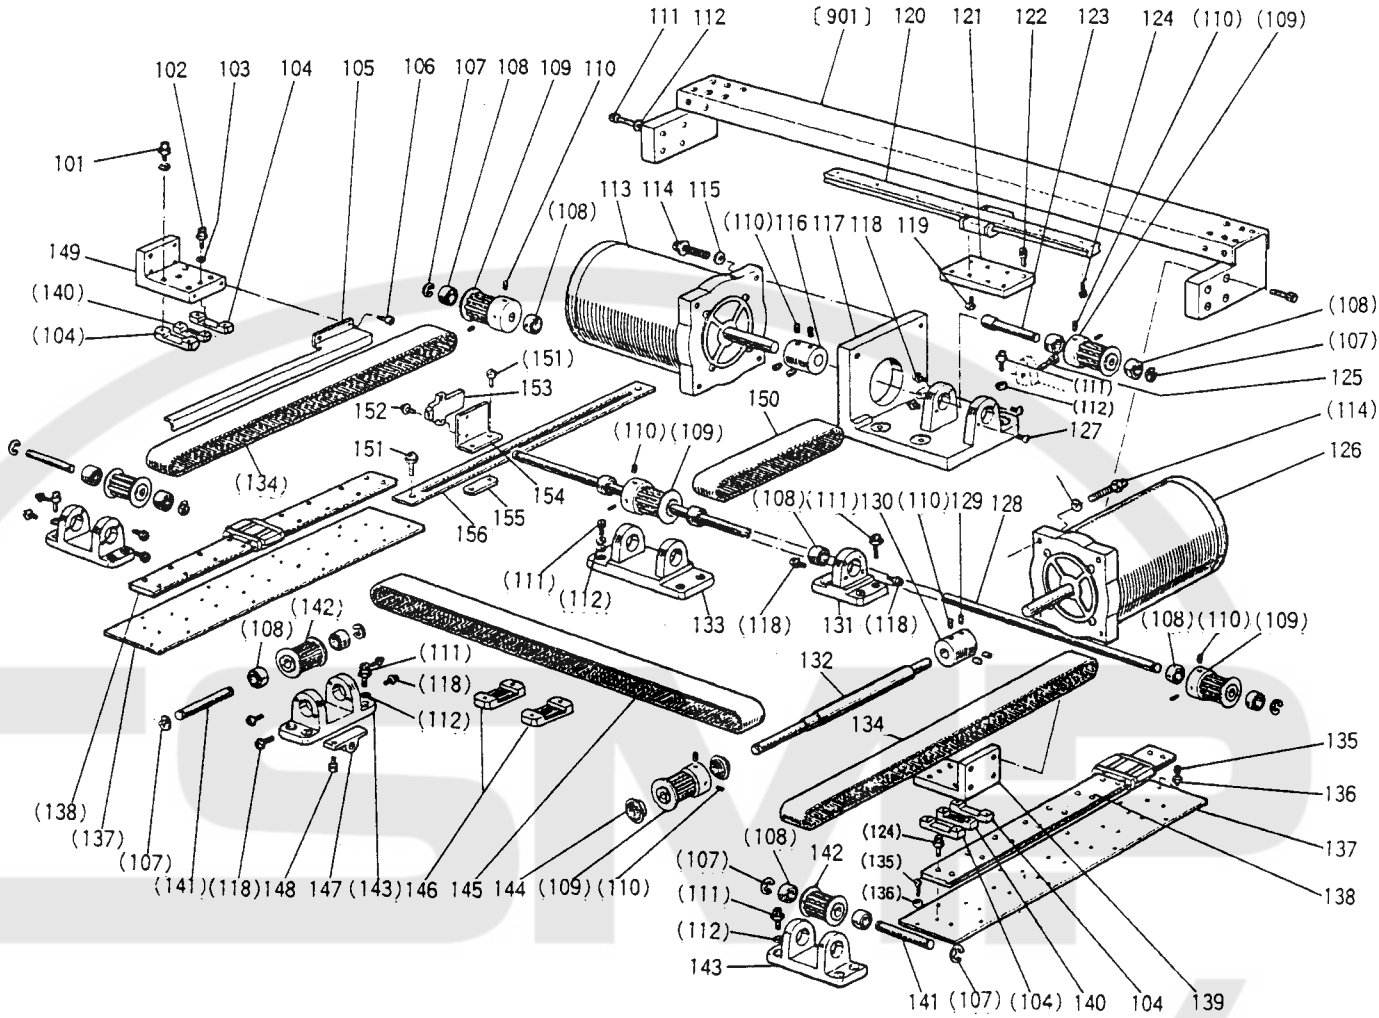

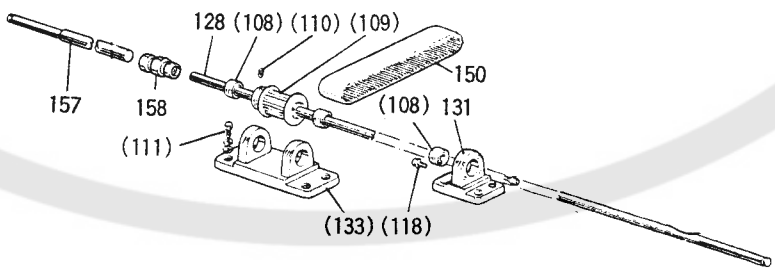



H X-Y テーブル機構（Ⅱ）
X-Y TABLE MECHANISM（Ⅱ）

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
H101	M94007017	ｾﾌﾃｨｿｹｯﾄ M4×12	Bolt M4×12	8	8	8
H102	M94002017	ｾﾌﾃｨｿｹｯﾄ M4×8	Bolt M4×8	4	4	4
H103	M90421050	ｻﾞｶﾞﾈ 4	Washer 4	12	12	12
H104	MA35A2476	ｽﾍﾟｰｻ	Spacer	4	4	4
H105	MB35A1407	Yｼﾞｸｹﾝｼｭﾂｲﾀ	Detector plate (Y)	1	1	1
H106	M94025021	ﾛｯｶｸｱﾅﾂｷﾎﾞﾀﾝﾎﾞﾙﾄ M4×6	Bolt M4×6	2	2	2
H107	M90604065	Eｶﾞﾀﾄﾒﾜ8	E-type retaining ring 8	10	10	10
H108	MS02A2456	ﾍﾞｱﾘﾝｸﾞ	Ball bearing	15	15	15
H109	MB45A0767	ﾀｲﾐﾝｸﾞﾌﾟｰﾘ	Cog pulley	5	5	5
H110	M96001001	ﾛｸｶｸｱﾅﾂｷﾄﾒﾈｼﾞ M6×8	Screw M6×8	10	10	10
H111	M95001017	ｾﾌﾃｨｿｹｯﾄ M5×20	Bolt M5×20	44	44	48
H112	M90512050	ｻﾞｶﾞﾈ 5	Washer 5	24	24	28
H113	M95050095	ｽﾃｯﾋﾟﾝｸﾞﾓｰﾀ (Yｼﾞｸ)	Motor complete (Y)	1	1	
H113	M95052095	ｽﾃｯﾋﾟﾝｸﾞﾓｰﾀ (Yｼﾞｸ)	Motor complete (Y)			1
H114	M98001017	ｾﾌﾃｨｿｹｯﾄ M8×25	Bolt M8×25	8	8	8
H115	M90825050	ｻﾞｶﾞﾈ 8	Washer 8	8	8	8
H116	MB35A0571	ﾂｷﾞﾃ	sleeve	1	1	1
H117	MA60A3603	ﾓｰﾀﾄﾘﾂｹﾀﾞｲ	Motor bracket	1	1	1
H118	M91071004	SW-MWﾂｷﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞM4×8	Screw M4×8	34	34	34
H119	M94017021	ﾛｯｶｸｱﾅﾂｷﾎﾞﾀﾝﾎﾞﾙﾄ M4×12	Bolt M4×12	4	4	4
H120	MA35A4920	ﾘﾆｱｳｴｲ	Linear way	1		
H120	MA36A0920	ﾘﾆｱｳｴｲ	Linear way		1	
H120	MA60A1920	ﾘﾆｱｳｴｲ	Linear way			1
H121	MB35A6601	ﾄﾘﾂｹｲﾀ	Linear way adapter	1	1	1
H122	M95002017	ｾﾌﾃｨｿｹｯﾄ M5×12	Bolt M5×12	4	4	4
H123	MB35A0390	Yｸﾄﾞｳｼﾞｸ	Y-drive shaft	1	1	1
H124	M95018021	ﾛｸｶｸｱﾅﾂｷﾎﾞﾙﾄ M4×8	Bolt M4×8	27	27	27
H125	M95015021	ﾛｯｶｸｱﾅﾂｷﾎﾞﾙﾄM5×20	Bolt M5×20	1	1	1
H126	M95049095	ｽﾃｯﾋﾟﾝｸﾞﾓｰﾀ (Xｼﾞｸ)	Motor complete (X)	1	1	
H126	M95051095	ｽﾃｯﾋﾟﾝｸﾞﾓｰﾀ (Xｼﾞｸ)	Motor complete (X)			1
H127	M91119002	ﾋﾗﾈｼﾞ(40)×6.8	Screw (40)×6.8	2	2	2
H128	MA35A2390	Yｸﾄﾞｳｼﾞｸ	Y-drive shaft	1	1	
H128	MA60A1390	Yｸﾄﾞｳｼﾞｸ	Y-drive shaft			1
H129	M91650020	ﾛｸｶｸｱﾅﾂｷﾄﾒﾈｼﾞ M5×8	Screw M5×8	6	6	6
H130	MB35A1571	ﾂｷﾞﾃ	sleeve	1	1	1
H131	MA35A1758	ﾌﾞﾗｹｯﾄ	Bracket	1	1	1
H132	MA60A0390	Xｸﾄﾞｳｼﾞｸ	X-drive shaft	1	1	1
H133	MA30A0758	ﾌﾞﾗｹｯﾄ	Bracket	1	1	2
H134	MA35A0523	ﾀｲﾐﾝｸﾞﾍﾞﾙﾄ (Yｼﾞｸ)	Cog belt (Y)	2	2	2
H135	M91060021	ﾛｯｶｸｱﾅﾂｷﾎﾞﾙﾄ M4×10	Bolt M4×10	4	4	4
H136	M91007045	ﾅｯﾄ M4	Nut M4	2	2	2
H137	MB35A0601	ｶﾞｲﾄﾞﾄﾘﾂｹｲﾀ	Linear way adapter	2	2	2
H138	MA35A5920	ﾘﾆｱｳｴｲ	Linear way	1	1	1
H139	MA35A9603	ﾄﾘﾂｹﾀﾞｲ	Bracket	1	1	1
H140	MA35A0781	ﾍﾞﾙﾄｵｻｴ(Yｼﾞｸ)	Belt clamber (Y)	2	2	2
H141	MS13A5454	ｼﾞｸ	Shaft	3	3	3
H142	MB62A0767	ﾀｲﾐﾝｸﾞﾌﾟｰﾘ	Cog pulley	3	3	3
H143	MB61A2758	ﾌﾞﾗｹｯﾄ	Bracket	3	3	3
H144	MB62A0456	ﾍﾞｱﾘﾝｸﾞ	Ball bearing	2	2	2
H145	MB35A0523	ﾀｲﾐﾝｸﾞﾍﾞﾙﾄ (Xｼﾞｸ)	Cog belt (X)	1	1	
H145	MB69A0523	ﾀｲﾐﾝｸﾞﾍﾞﾙﾄ (Xｼﾞｸ)	Cog belt (X)			1
H146	MA45A0778	ﾍﾞﾙﾄｵｻｴ	Belt clamber	2	2	2
H147	MA35A0564	ﾁｮｳｾﾂﾀﾞｲ	Bracket	1	1	1
H148	M95004017	ｾﾌﾃｨｿｹｯﾄ M5×16	Bolt M5×16	2	2	2
H149	MA35B0603	ﾄﾘﾂｹﾀﾞｲ	Bracket	1	1	1
H150	MB35A1523	ﾀｲﾐﾝｸﾞﾍﾞﾙﾄ(Yｼﾞｸ)	Cog belt (Y)	1	1	1
H151	M91056004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×10	Screw M4×10	4	4	4
H152	M90816004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M3×8	Screw M3×8	2	2	2
H153	MB60A0406	ｷﾝｾﾂｽｲｯﾁ	Detector	1	1	1
H154	MB35A2601	ｹﾝｼｭﾂｷﾄﾘﾂｹｲﾀ	Detector holder	1	1	1
H155	MB35A0639	ﾈｼﾞｲﾀ	Adapter	1	1	1
H156	MB35A3601	ｹﾝｼｭﾂｷﾄﾘﾂｹｲﾀ	Detector holder	1	1	1
H157	MB65A0390	Yｸﾄﾞｳｼﾞｸ	Y-drive shaft			1
H158	MA60A0364	ｶｯﾌﾟﾘﾝｸﾞ	Coupling			1
H901	MA35A1200	Yｲﾄﾞｳﾀﾞｲ	Y-axis cradle	1		
H901	MA36A0200	Yｲﾄﾞｳﾀﾞｲ	Y-axis cradle		1	
H901	MA60A0200	Yｲﾄﾞｳﾀﾞｲ	Y-axis cradle			1

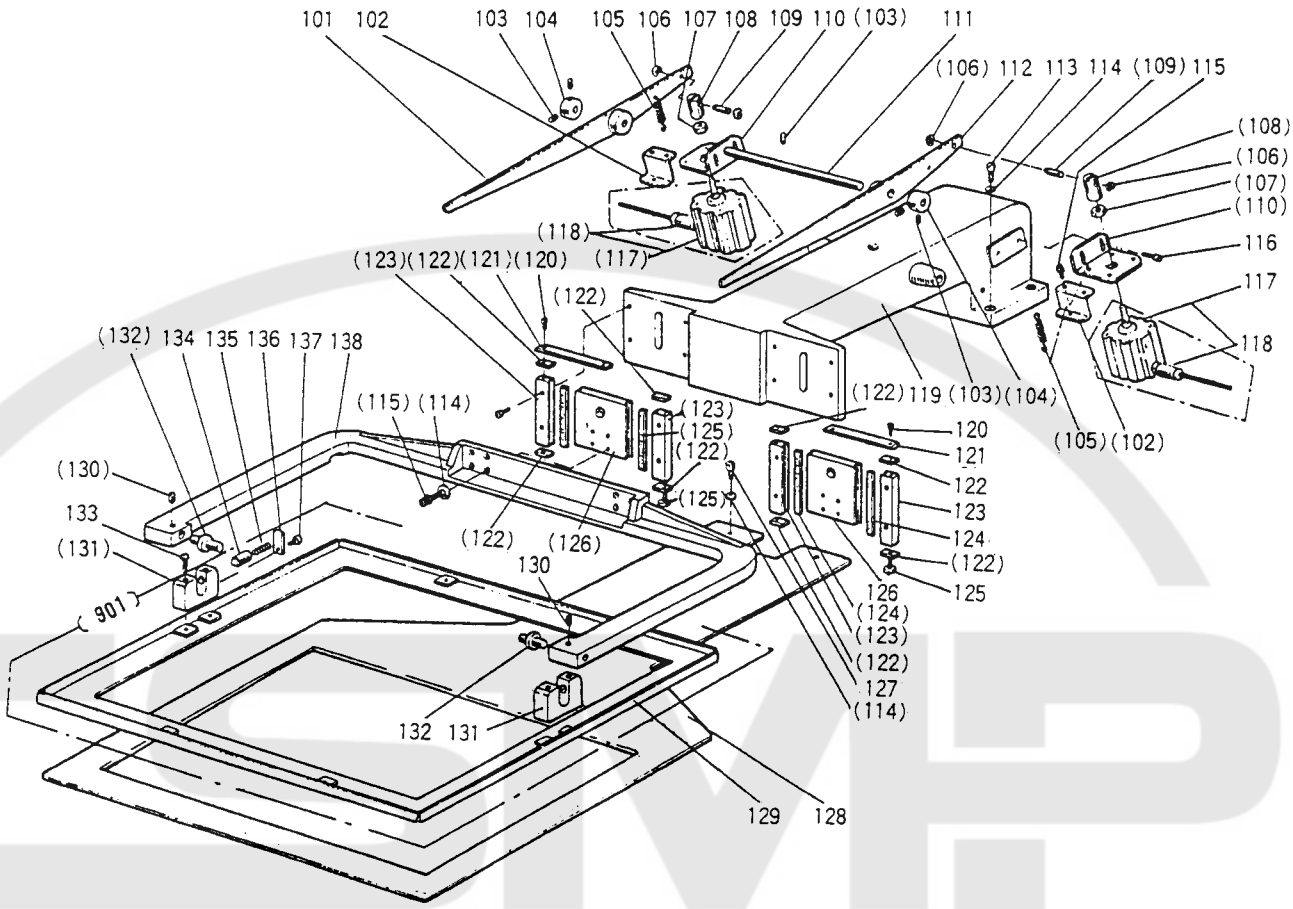
101 102 103 104 105 106 107 108 109 110 (103) 111
(106) 112 113 114 (109) 115
(108)
(106)
(107)
(110)
116
117
118
(118)
(123)(122)(121)(120) (117)
(122)
(132) 134 135 136 137 138
(115) (114)
(123)
(125)
(122)
(122) 119 (103)(104)
(105)(102)
120
121
122
123
124
(122)
125
126
(124)
(123)
(122)
127
(114)
(130)
133
(131)
901
(122) (126)
130
132 131
129 128

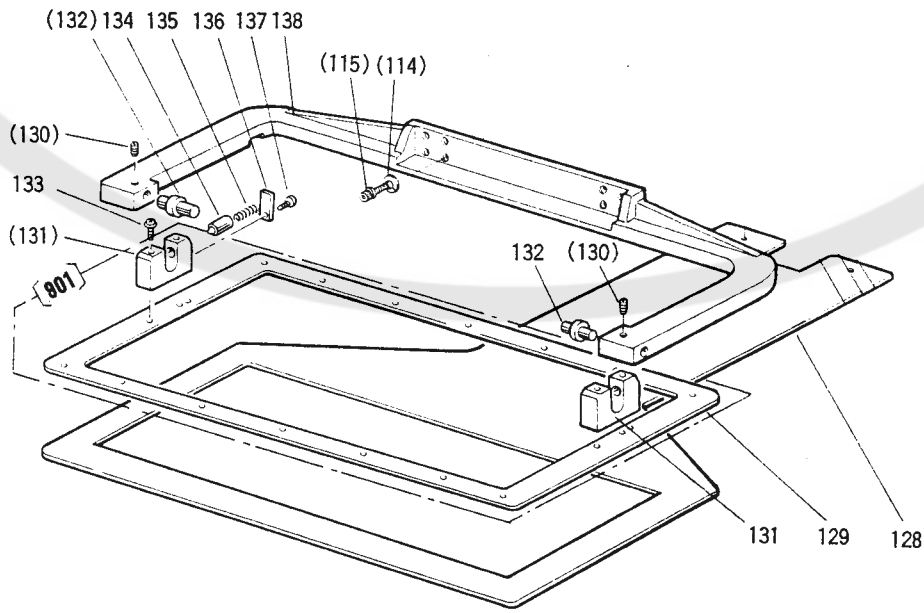
(132) 134 135 136 137 138
(115) (114)
(130)
133
(131)
901
132 (130)
131 129 128

J 外押え機構
WORK HOLDER MECHANISM

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
J101	MA35A2950	ｵｻｴﾚﾊﾞｰ	Pushing lever	1	1	1
J102	MA35A2708	ﾊﾞﾈｶｹ	Hook	2	2	2
J103	M95002020	ﾛｯｶｸｱﾅﾂｷﾄﾒﾈｼﾞM5×6	Screw M5×6	5	5	5
J104	MS02A1352	ｶﾗｰ	Collar	2	2	2
J105	MA35A3572	ﾂﾙﾏｷﾊﾞﾈ	Spring	2	2	2
J106	M90512065	Eｶﾞﾀﾄﾒﾜ3	E-Type retaining ring 3	2	2	2
J107	M91576045	ﾅｯﾄ M6	Nut M6	2	2	2
J108	MA35A0621	ﾅｯｸﾙ	Knuckle	2	2	2
J109	M97011060	ﾋﾟﾝ	Pin	2	2	2
J110	MA20B1601	ﾄﾘﾂｹｲﾀ	Adapter	2	2	2
J111	MA35A0454	ｼﾞｸ	Shaft	1	1	1
J112	MA35A4950	ｵｻｴﾚﾊﾞｰ	Pushing lever	1	1	1
J113	M95001017	ｾﾌﾃｨｿｹｯﾄ M5×20	Bolt M5×20	4	4	4
J114	M90511050	ｻﾞｶﾞﾈ 5	Washer 5	4	4	4
J115	M95004017	ｾﾌﾃｨｿｹｯﾄ M5×16	Bolt M5×16	16	16	16
J116	M95002017	ｾﾌﾃｨｿｹｯﾄ M5×12	Bolt M5×12	4	4	4
J117	MA20A2434	ｴｱｼﾘﾝﾀﾞ	Air cylinder	2	2	2
J118	MA20A9571	ﾜﾝﾀｯﾁﾂｷﾞﾃ	Connector	2	2	2
J119	MA35A0308	ｵｻｴﾀﾞｲ	Clamp bracket	1	1	1
J120	M91060021	ﾛｸｶｸｱﾅﾂｷﾎﾞﾙﾄ M4×10	Bolt M4×10	4	4	4
J121	MA35A2477	ｽﾄｯﾊﾟ	Stopper	2	2	2
J122	MS13A2477	ｽﾄｯﾊﾟ	Stopper	8	8	8
J123	MS13A8957	ｺﾃｲﾚｰｽ	Fixed race	4	4	4
J124	MS13A1972	ﾛｰﾗｹｰｼﾞ	Slide bearing	4	4	4
J125	M95018021	ﾛｸｶｸｱﾅﾂｷﾎﾞﾙﾄ M4×10	Bolt M4×10	4	4	4
J126	MA35A1957	ｲﾄﾞｳﾚｰｽ	Movable race	2	2	2
J127	M90511056	ｾﾌﾃｨｿｹｯﾄM5×8	Bolt M5×8	2	2	2
J128	MS18A1272	ｼﾀｵｻｴｲﾀ	Feed plate	1		
J128	MA36A0272	ｼﾀｵｻｴｲﾀ	Feed plate		1	
J128	MA60A0272	ｼﾀｵｻｴｲﾀ	Feed plate			1
J129	MA35A0105	ｿﾄｵｻｴｲﾀ	Clamp frame	1		
J129	MA36A0105	ｿﾄｵｻｴｲﾀ	Clamp frame		1	
J129	MA60A0105	ｿﾄｵｻｴｲﾀ	Clamp frame			1
J130	M91050020	ﾛｸｶｸｱﾅﾂｷﾄﾒﾈｼﾞ M4×5	Screw M4×5	2	2	2
J131	MS02E0426	ｻﾎﾟｻｴ	Supporter	2	2	2
J132	MS02A2454	ｵｻｴｼﾞｸ	Clamp stud	2	2	2
J133	M91056004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×10	Screw M4×10	4	4	4
J134	M90611060	ﾋﾟﾝ	Pin	2	2	2
J135	MS13A0572	ﾂﾙﾏｷﾊﾞﾈ	Spring	2	2	2
J136	MS02B0257	ｵｻｴｲﾀ	Adapter	2	2	2
J137	M90859004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M3×6	Screw M3×6	2	2	2
J138	MA35A0273	ｵｻｴｳﾃﾞ	Clamp adapter	1		
J138	MA36A0273	ｵｻｴｳﾃﾞ	Clamp adapter		1	
J138	MA60A0273	ｵｻｴｳﾃﾞ	Clamp adapter			1
J901	MA35E0105	ｿﾄｵｻｴ(ｸﾐ)	Clamp frame assy.	1		
J901	MA36E0105	ｿﾄｵｻｴ(ｸﾐ)	Clamp frame assy.		1	
J901	MA60E0105	ｿﾄｵｻｴ(ｸﾐ)	Clamp frame assy.			1

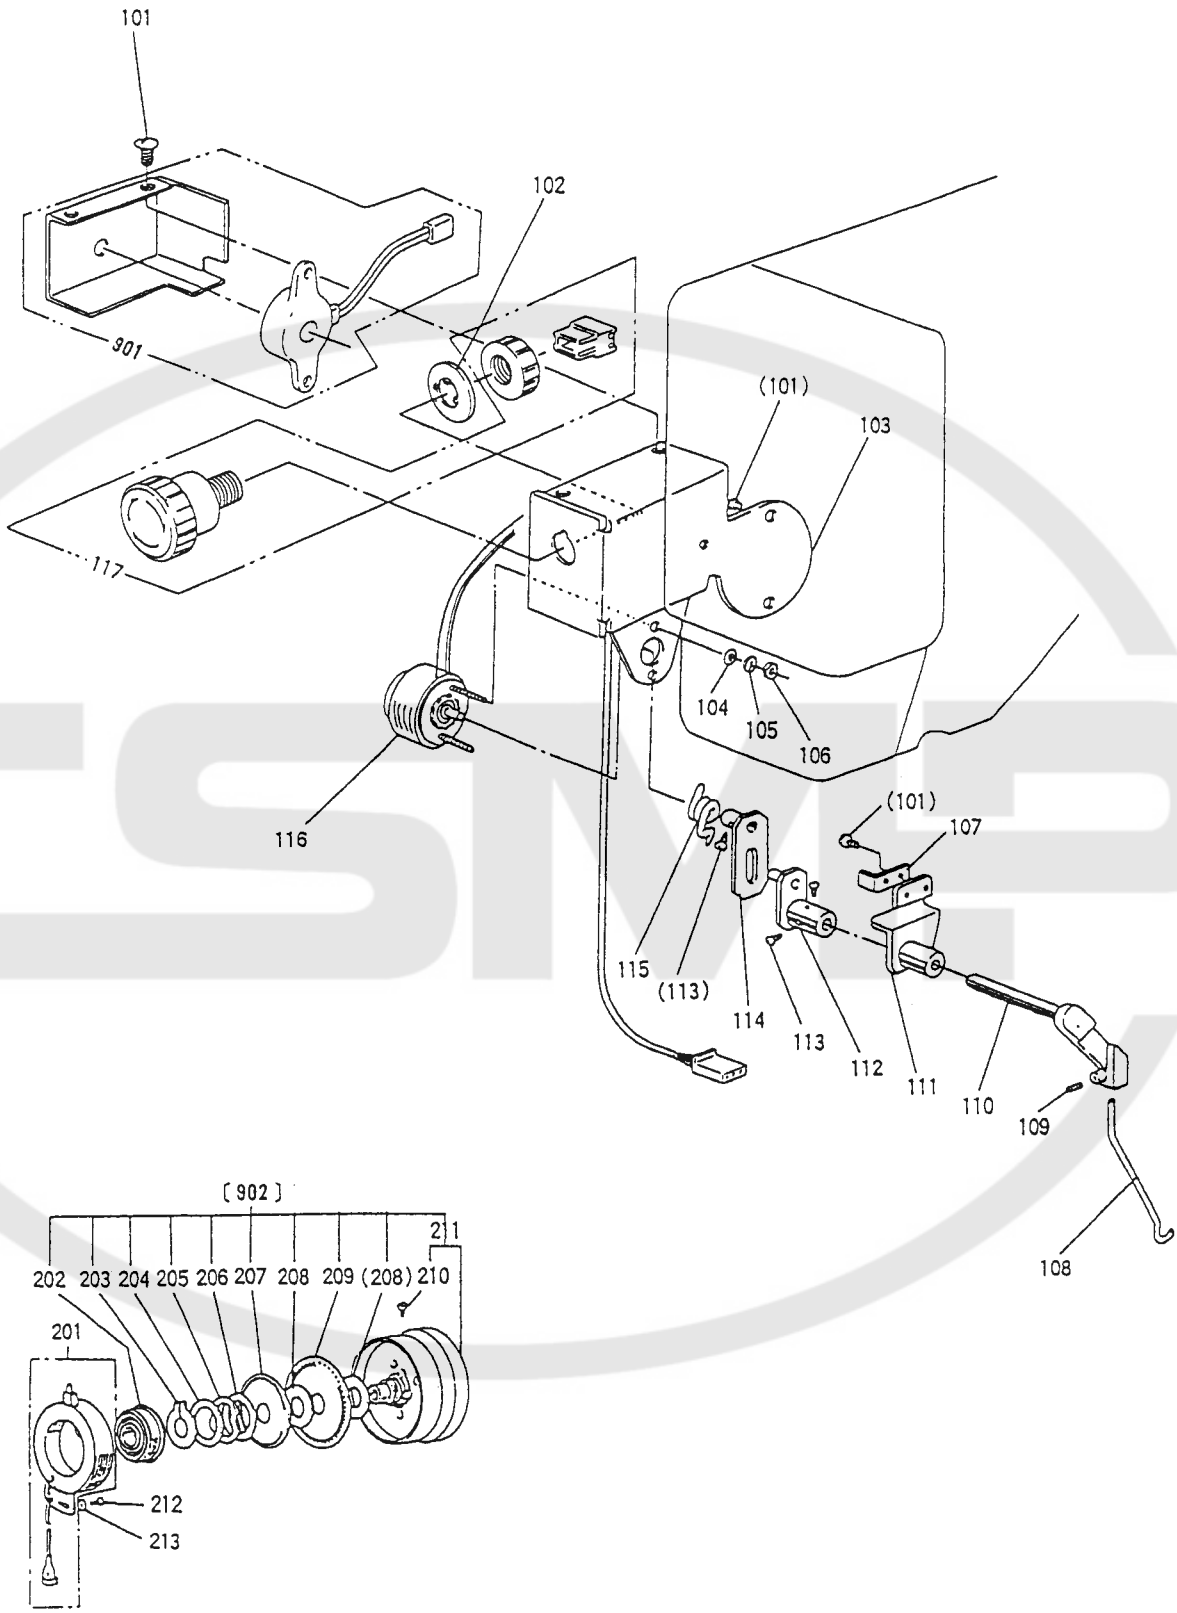
101
102
901
(101)
103
117
104
105
106
116
(101)
107
115
(113)
114
113
112
111
110
109
108
〔902〕
211
202 203 204 205 206 207 208 209 (208) 210
201
212
213

K ワイパー機構・検出器
WIPER & DETECTOR MECHANISM

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
K101	M91054004	SW-PWﾂｷﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞM4×8	Screw M4×8	7	7	7
K102	MB60A0915	ﾏﾜﾘﾄﾞﾒﾘﾝｸﾞ	Snap ring	1	1	1
K103	MB60E7601	ﾄﾘﾂｹｲﾀ(ｼｰﾙﾂｷ)	Bracket	1	1	1
K104	M90316050	ｻﾞｶﾞﾈ3	Washer 3	2	2	2
K105	M90307053	ﾊﾞﾈｻﾞｶﾞﾈ3	Spring washer 3	2	2	2
K106	M90875045	ﾅｯﾄM3	Nut M3	2	2	2
K107	MS02A1477	ｽﾄｯﾊﾟ	Stopper	1	1	1
K108	MA20A0980	ﾜｲﾊﾟ	Wiper	1	1	1
K109	M91057020	ﾛｯｶｸｱﾅﾂｷﾄﾒﾈｼﾞM3×4	Screw M3×4	1	1	1
K110	MS03A1530	ﾜｲﾊﾟｰｼﾞｸ	Wiper shaft	1	1	1
K111	MS10A0982	ﾜｲﾊﾟｰﾀﾞｲ	Wiper adapter	1	1	1
K112	MS02E0981	ﾜｲﾊﾟｰｳﾃﾞ	Wiper clank	1	1	1
K113	M90802003	ﾏﾙﾋﾗﾈｼﾞ1/8(44)×4.5	Screw 1/8(44)×4.5	4	4	4
K114	MS02E0983	ｸﾄﾞｳｲﾀ	Wiper clank	1	1	1
K115	MS02A4729	ﾋﾈﾘﾊﾞﾈ	Spring	1	1	1
K116	MB45E0519	ﾛｰﾀﾘｿﾚﾉｲﾄﾞｸﾐﾀﾃ	Rotary solenoid assy	1	1	1
K117	MB60E0270	ｵｼﾎﾞﾀﾝｽｲｯﾁｸﾐﾀﾃ	Halt switch assy	1	1	1
K201	MB60A2406	ｾﾝｻｰ	Detector bracket assy	1	1	1
K202	MN10A1456	ｼﾞｸｳｹ	Ball bearing	1	1	1
K203	M90330065	Cｶﾞﾀﾄﾒﾜ30	Retaining ring C-type 30	1	1	1
K204	M93001050	ｻﾞｶﾞﾈ	Washer	1	1	1
K205	MF01A0259	ﾊﾝｼｬﾊﾞﾝｵｻｴｽﾌﾟﾘﾝｸﾞ	Wave washer	1	1	1
K206	MF01A1476	ｽﾍﾟｰｻB	Spacer B	1	1	1
K207	MN72A1694	ﾊﾝｼｬﾊﾞﾝF20(ｳｴ)	Speed command disk F20 (up)	1	1	1
K208	MF01A0476	ｽﾍﾟｰｻA	Spacer A	2	2	2
K209	MB60A0694	ﾊﾝｼｬﾊﾞﾝK10(ｼﾀ)	Speed command disk K10 (down)	1	1	1
K210	M91520002	ﾋﾗﾈｼﾞ15/64(28)×12	Screw 15/64(28)×12	2	2	2
K211	MB60E0682	ﾌﾟｰﾘｸﾐﾀﾃ	Pulley assy	1	1	1
K212	M91069004	ﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×8	Screw M4×8	1	1	1
K213	M93002050	ｻﾞｶﾞﾈ	Washer	1	1	1
K901	MB60E3339	ｶﾊﾞｰｸﾐﾀﾃ(ﾌﾞｻﾞｰﾂｷ)	Cover assy (with buzzer)	1	1	1
K902	MB60E1682	ﾌﾟｰﾘｸﾐﾀﾃ	Pulley assy	1	1	1

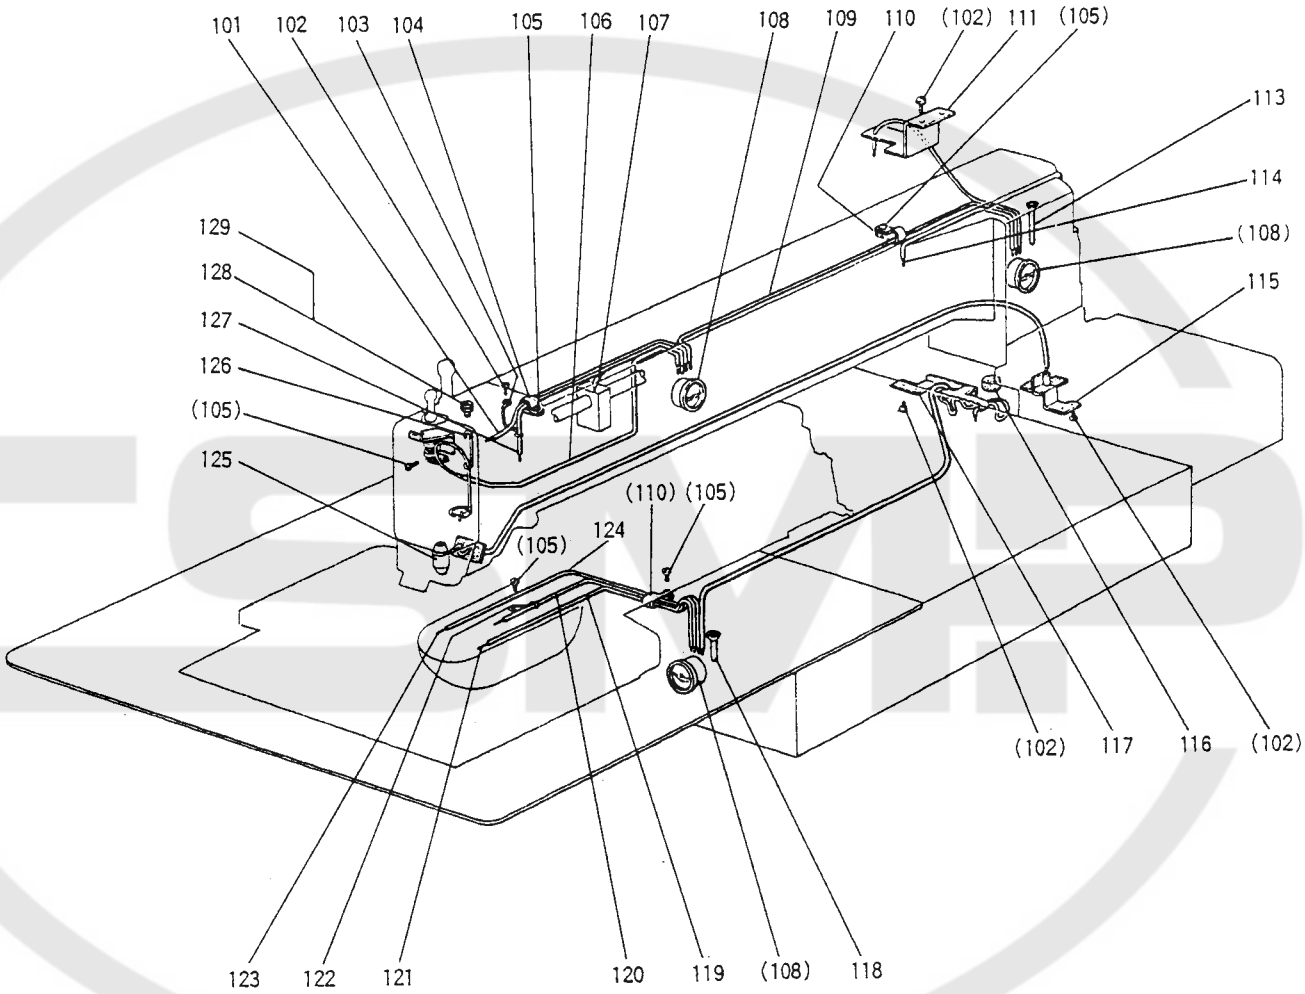
101
102
103
104
105
106
107
108
109
110
(102)
111
(105)
113
114
(108)
115
129
128
127
126
(105)
125
(110)
(105)
124
(105)
(102)
117
116
(102)
123
122
121
120
119
(108)
118

L 給油機構
OIL LUBRICATION MECHANISM

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
L101	MB35E0688	ﾊﾟｲﾌﾟﾋﾓｸﾐﾀﾃ(ｳﾜｼﾞｸﾒﾀﾙ)	Oil pipe assy.(arm shaft bushing)	1	1	1
L102	M91058004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×6	Screw M4×6	8	8	8
L103	MA20A1780	ﾎﾙﾀﾞｰ	Holder	1	1	1
L104	MA20A0620	ﾅｲﾛﾝｸﾘｯﾌﾟ	Nylon clip	1	1	1
L105	M91054004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×8	Screw M4×8	6	6	6
L106	MB35E0780	ﾎﾙﾀﾞｰｸﾐﾀﾃ(ﾊﾘﾎﾞｳ)	Holder assy.(needle bar)	1	1	1
L107	MA20E2688	ﾊﾟｲﾌﾟﾋﾓｸﾐﾀﾃ(ｳﾜｼﾞｸﾒﾀﾙ)	Oil pipe assy.(arm shaft bushing)	1	1	1
L108	MN10A0135	ｱﾌﾞﾗﾏﾄﾞ	Oil gauge	2	2	2
L109	MB35E1688	ﾊﾟｲﾌﾟﾋﾓｸﾐﾀﾃ(ﾁｭｳｹｲ)	Oil pipe assy.(junction)	1	1	1
L110	MS47P0620	ﾅｲﾛﾝｸﾘｯﾌﾟ	Nylon clip	2	2	2
L111	MB60A1780	ﾎﾙﾀﾞｰ	Holder	1	1	1
L112	MB62E0780	ﾎﾙﾀﾞｰｸﾐﾀﾃ(ﾚﾝｾﾂｶﾝ)	Holder assy.(connecting rod)	1	1	1
L114	MA20E2688	ﾊﾟｲﾌﾟﾋﾓｸﾐﾀﾃ(ｳﾜｼﾞｸﾒﾀﾙ)	Oil pipe assy.(arm shaft bushing)	1	1	1
L115	MA35E1780	ﾎﾙﾀﾞｸﾐﾀﾃ(ｾｸﾀﾊｸﾞﾙﾏ)	Holder assy.(sector gear)	1	1	1
L116	MF60A5740	ﾌｪﾙﾄ	Felt	1	1	1
L117	MA35E2780	ﾎﾙﾀﾞｸﾐﾀﾃ(ｼﾀｼﾞｸﾒﾀﾙ)	Holder assy.(hook shaft bushing)	1	1	1
L118	MA20A6688	ﾊﾟｲﾌﾟ	Pipe	1	1	1
L119	MA35A1688	ﾊﾟｲﾌﾟ(ｿﾄｶﾞﾏ)	Pipe(outer hook)	1	1	1
L120	MA35E3688	ﾊﾟｲﾌﾟﾋﾓｸﾐﾀﾃ(ｼﾀｼﾞｸﾒﾀﾙ)	Oil pipe assy.(hook shaft bushing)	1	1	1
L121	MA35A0148	ﾋﾓ(ｿﾄｶﾞﾏ)	String(outer hook)	1	1	1
L122	MS01A8796	ﾎﾙﾀﾞｰ	Holder	1	1	1
L123	MA35A1148	ﾋﾓ(ｿﾄｶﾞﾏ)	String(outer hook)	1	1	1
L124	MA35A0688	ﾊﾟｲﾌﾟ(ｿﾄｶﾞﾏ)	Pipe(outer hook)	1	1	1
L125	MF00A1780	ﾎﾙﾀﾞｰ	Holder	1	1	1
L126	MS03A2780	ﾎﾙﾀﾞｰ	Holder	1	1	1
L127	MB35E2688	ﾊﾟｲﾌﾟﾋﾓｸﾐﾀﾃ(ﾍﾝｼﾝﾘﾝ)	Oil pipe assy.(eccentric bushing)	1	1	1
L128	MF60A0742	ﾌﾀ	Cap	1	1	1
L129	MF10A2740	ﾌｪﾙﾄ	Felt	1	1	1

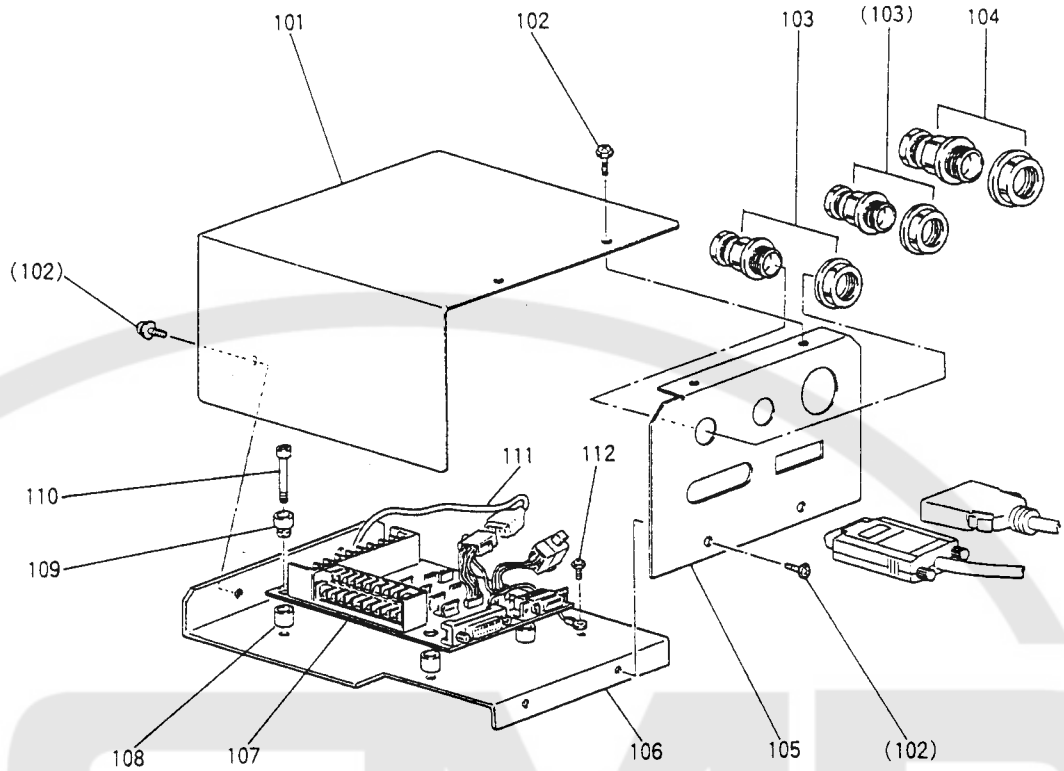
101
102
103
(103)
104
(102)
110
109
111
112
108
107
106
105
(102)

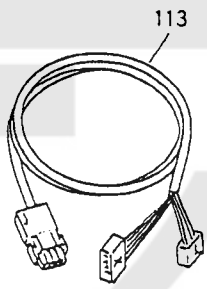
113

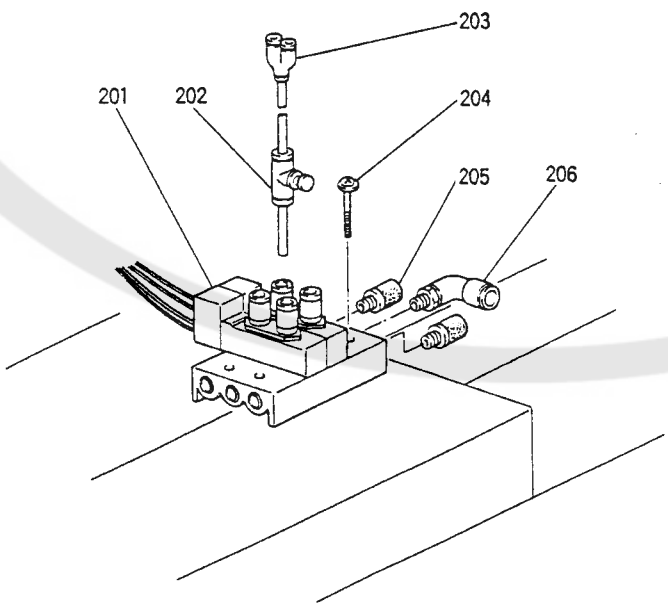
203
201
202
204
205
206

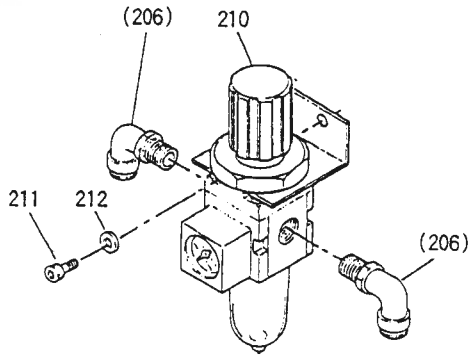
(206)
210
211
212
(206)

Ⓜ 配線・配管関係
CABLE COMPONENT & PNEUMATIC CONTROL UNIT

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
M101	MB35A0339	ﾊﾞﾝｶﾊﾞｰ	Cover	1	1	
M102	M91054004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×8	Screw M4×8	6	6	2
M103	MB60A5780	ｺｰﾄﾞﾌﾞｯｼｭ	Cord holder	2	2	2
M104	MB60A6780	ｺｰﾄﾞﾌﾞｯｼｭ	Cord holder	1	1	1
M105	MB60A5601	ｺﾈｸﾀﾄﾘﾂｹｲﾀ	Connector panel	1	1	1
M106	MB35A7601	ﾊﾞﾝｽﾃｰ	Adapter	1	1	
M106	MB65A0601	ﾊﾞﾝｽﾃｰ	Adapter			1
M107	M95003096	ﾌﾟﾘﾝﾄｷﾊﾞﾝｸﾐﾀﾃ	Print circuit board	1	1	1
M108	MB60A2352	ｽﾍﾟｰｻ	Spacer	4	4	4
M109	MB60A0366	ｷｬｯﾌﾟ	Screw adapter	4	4	4
M110	M91057004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×20	Screw M4×20	4	4	4
M111	K14M71725402	ｹｰﾌﾞﾙ(ｻｰﾎﾞｴﾝｺｰﾀﾞ)	Cable (servo encoder)	1	1	1
M112	M90439037	SWｯｷﾎﾟﾅﾍﾞﾈｼﾞ M4×8	Screw M4×8	1	1	1
M113	M97324099	ｹｰﾌﾞﾙ(ｽﾃｯﾋﾟﾝｸﾞﾓｰﾀ)	Cable (Stepping motor)	1	1	1
M201	MB45E0599	ﾃﾞﾝｼﾞﾍﾞﾝｸﾐﾀﾃ	Solenoid valve complete	1	1	1
M202	M92209098	ｽﾋﾟｰﾄﾞｺﾝﾄﾛｰﾗ	Speed controller	1	1	1
M203	MA20A6571	Yｶﾞﾀｯｷﾞﾃ	Connector	1	1	1
M204	M91276004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×30	Screw M4×30	4	4	4
M205	M91035089	ｻｲﾚﾝｻ	Muffler	2	2	2
M206	MA20A8571	Lｶﾞﾀｯｷﾞﾃ	Connector	3	3	3
M210	MB61A0963	ﾌｨﾙﾀﾚｷﾞｭﾚｰﾀ	Filter regulator	1	1	1
M211	M95003017	ｾﾌﾃｲｿｹｯﾄ M5×8	Bolt M5×8	2	2	2
M212	M90511050	ﾐｶﾞｷｻﾞｶﾞﾈ 5	Washer 5	2	2	2

N テーブル関係
TABLE & STAND

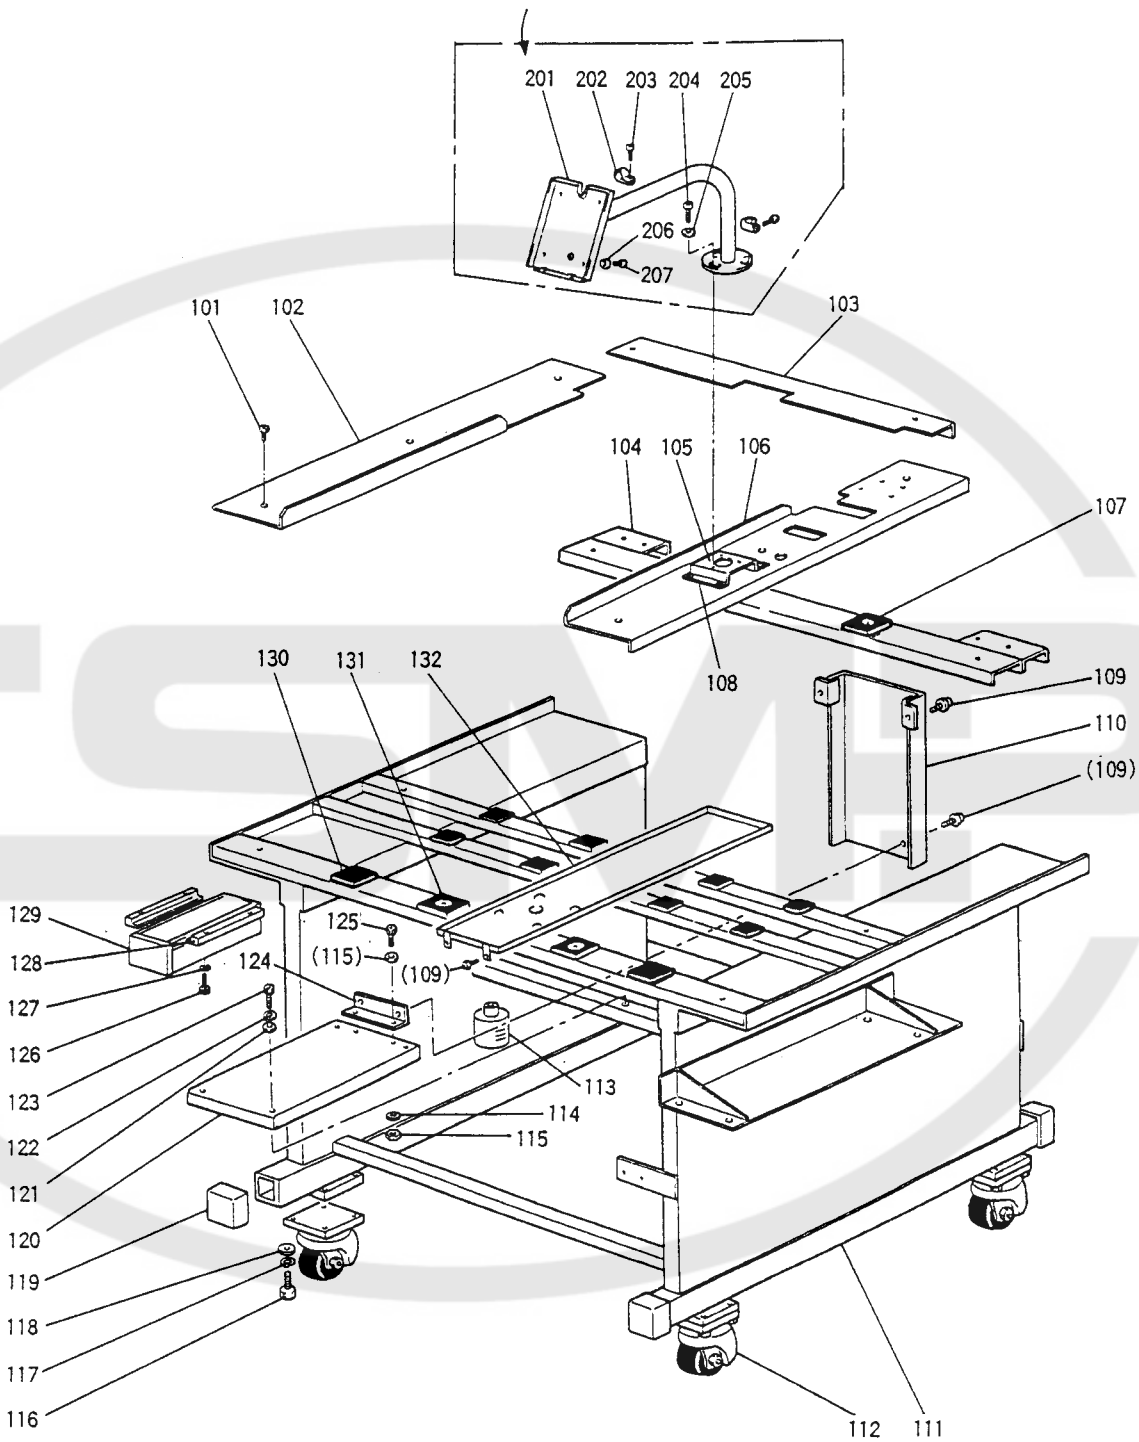

N テーブル関係
TABLE & STAND

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
N101	M98008021	ﾛｯｸｶｸｱﾅﾂｷﾎﾞﾙﾄ M8×40	Bolt M8×40	8	8	8
N102	MB35A2339	ｷｬｯｸｶﾊﾞｰ(ﾋﾀﾞﾘ)	Table cover(left)	1	1	1
N103	MA35A3339	ｷｬｯｸｶﾊﾞｰ(ｳｼﾛ)	Table cover(rear)	1	1	
N103	MB65A0339	ｷｬｯｸｶﾊﾞｰ(ｳｼﾛ)	Table cover(rear)			1
N104	MB35A0429	ｻｻｴﾀﾞｲ	Adapter	1	1	
N104	MB65A0429	ｻｻｴﾀﾞｲ	Adapter			1
N105	MB35A0603	ｽﾀﾝﾄﾞﾀﾞｲ	Adapter	1	1	1
N106	MB35A4339	ｷｬｯｸｶﾊﾞｰ(ﾐｷﾞ)	Table cover(right)	1	1	
N106	MB65A1339	ｷｬｯｸｶﾊﾞｰ(ﾐｷﾞ)	Table cover(right)			1
N107	MA35A0419	ﾎﾞｳｼﾝｺﾞﾑ	Rubber cushion	2	2	2
N108	M96002017	ｾﾌﾃｨｿｹｯﾄ M6×12	Bolt M6×12	4	4	4
N109	M91054004	SW-PWﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×8	Screw M4×8	6	6	6
N110	MA60E0776	ﾍﾞﾙﾄｶﾊﾞｰ	Belt cover	1	1	1
N111	MB35E0150	ｷｬｯｸﾐﾀﾃ	Table	1	1	
N111	MB65E0150	ｷｬｯｸﾐﾀﾃ	Table			1
N112	MB45E0972	ｷｬｽﾀｰ	Castor	4	4	4
N113	MF20A0130	ｱﾌﾞﾗﾋﾞﾝ	Oil bottle	1	1	1
N114	M90511050	ｻﾞｶﾞﾈ 5	Washer 5	2	2	2
N115	M91382045	ﾅｯﾄM5	Nut M5	2	2	2
N116	M92056022	ﾛｯｸｶｸﾎﾞﾙﾄ M8×25	Bolt M8×25	16	16	16
N117	M90802053	ﾊﾞﾈｻﾞｶﾞﾈ 8	Spring washer 8	16	16	16
N118	M90815050	ｻﾞｶﾞﾈ 8	Washer 6	16	16	16
N119	MB45A0150	ｺﾞﾑｷｬｯｸ	Top cap	4	4	4
N120	MA35B8601	ﾓｰﾀﾄﾘﾂｹｲﾀ	Motor adapter	1	1	1
N121	M90631050	ｻﾞｶﾞﾈ 6	Washer 6	10	10	10
N122	M90624053	ﾊﾞﾈｻﾞｶﾞﾈ 6	Spring washer 6	4	4	4
N123	M96016021	ﾛｯｸｶｸｱﾅﾂｷﾎﾞﾙﾄ M6×45	Bolt M6×45	4	4	4
N124	MA35B7601	ﾍﾞﾙﾄｶﾊﾞｰﾄﾘﾂｹｲﾀ	Adapter	1	1	1
N125	M95005021	ﾛｯｸｶｸｱﾅﾂｷﾎﾞﾙﾄ M5×40	Bolt M5×40	2	2	2
N126	M93013021	ﾛｯｶｸｱﾅﾂｷﾎﾞﾙﾄ M3×20	Screw M3×20	4	4	4
N127	M90316050	ｻﾞｶﾞﾈ 3	Washer 3	4	4	4
N129	MA20A0719	ﾋｷﾀﾞｼ	Drawer	1	1	1
N128	MB60A3957	ﾚｰﾙ	Rail	2	2	2
N130	MA35A1419	ﾎﾞｳｼﾝｺﾞﾑ	Rubber cushion	10	10	10
N131	MA35A2419	ﾎﾞｳｼﾝｺﾞﾑ	Rubber cushion	2	2	2
N132	MB35A0139	ｵｲﾙﾊﾟﾝ	Oil pan	1	1	1
N201	MA35E0483	ｿｳｻｽﾀﾝﾄﾞ	Operation stand	1	1	1
N202	MA20A2620	ﾅｲﾛﾝｸﾘｯﾌﾟ	Nylon clip	2	2	2
N203	M91069004	ﾌﾟﾗﾏｲﾅﾍﾞﾈｼﾞ M4×8	Screw M4×8	2	2	2
N204	M91558022	ﾛｯｶｸﾎﾞﾀﾝﾎﾞﾙﾄ M6×45	Bolt M6×45	3	3	3
N205	M90631050	ｻﾞｶﾞﾈ 6	Washer 6	15	15	15
N206	M91606022	ﾛｯｶｸﾎﾞﾀﾝﾎﾞﾙﾄ M3×10	Bolt M3×10	4	4	4
N207	M90316050	ｻﾞｶﾞﾈ 3	Washer 3	4	4	4

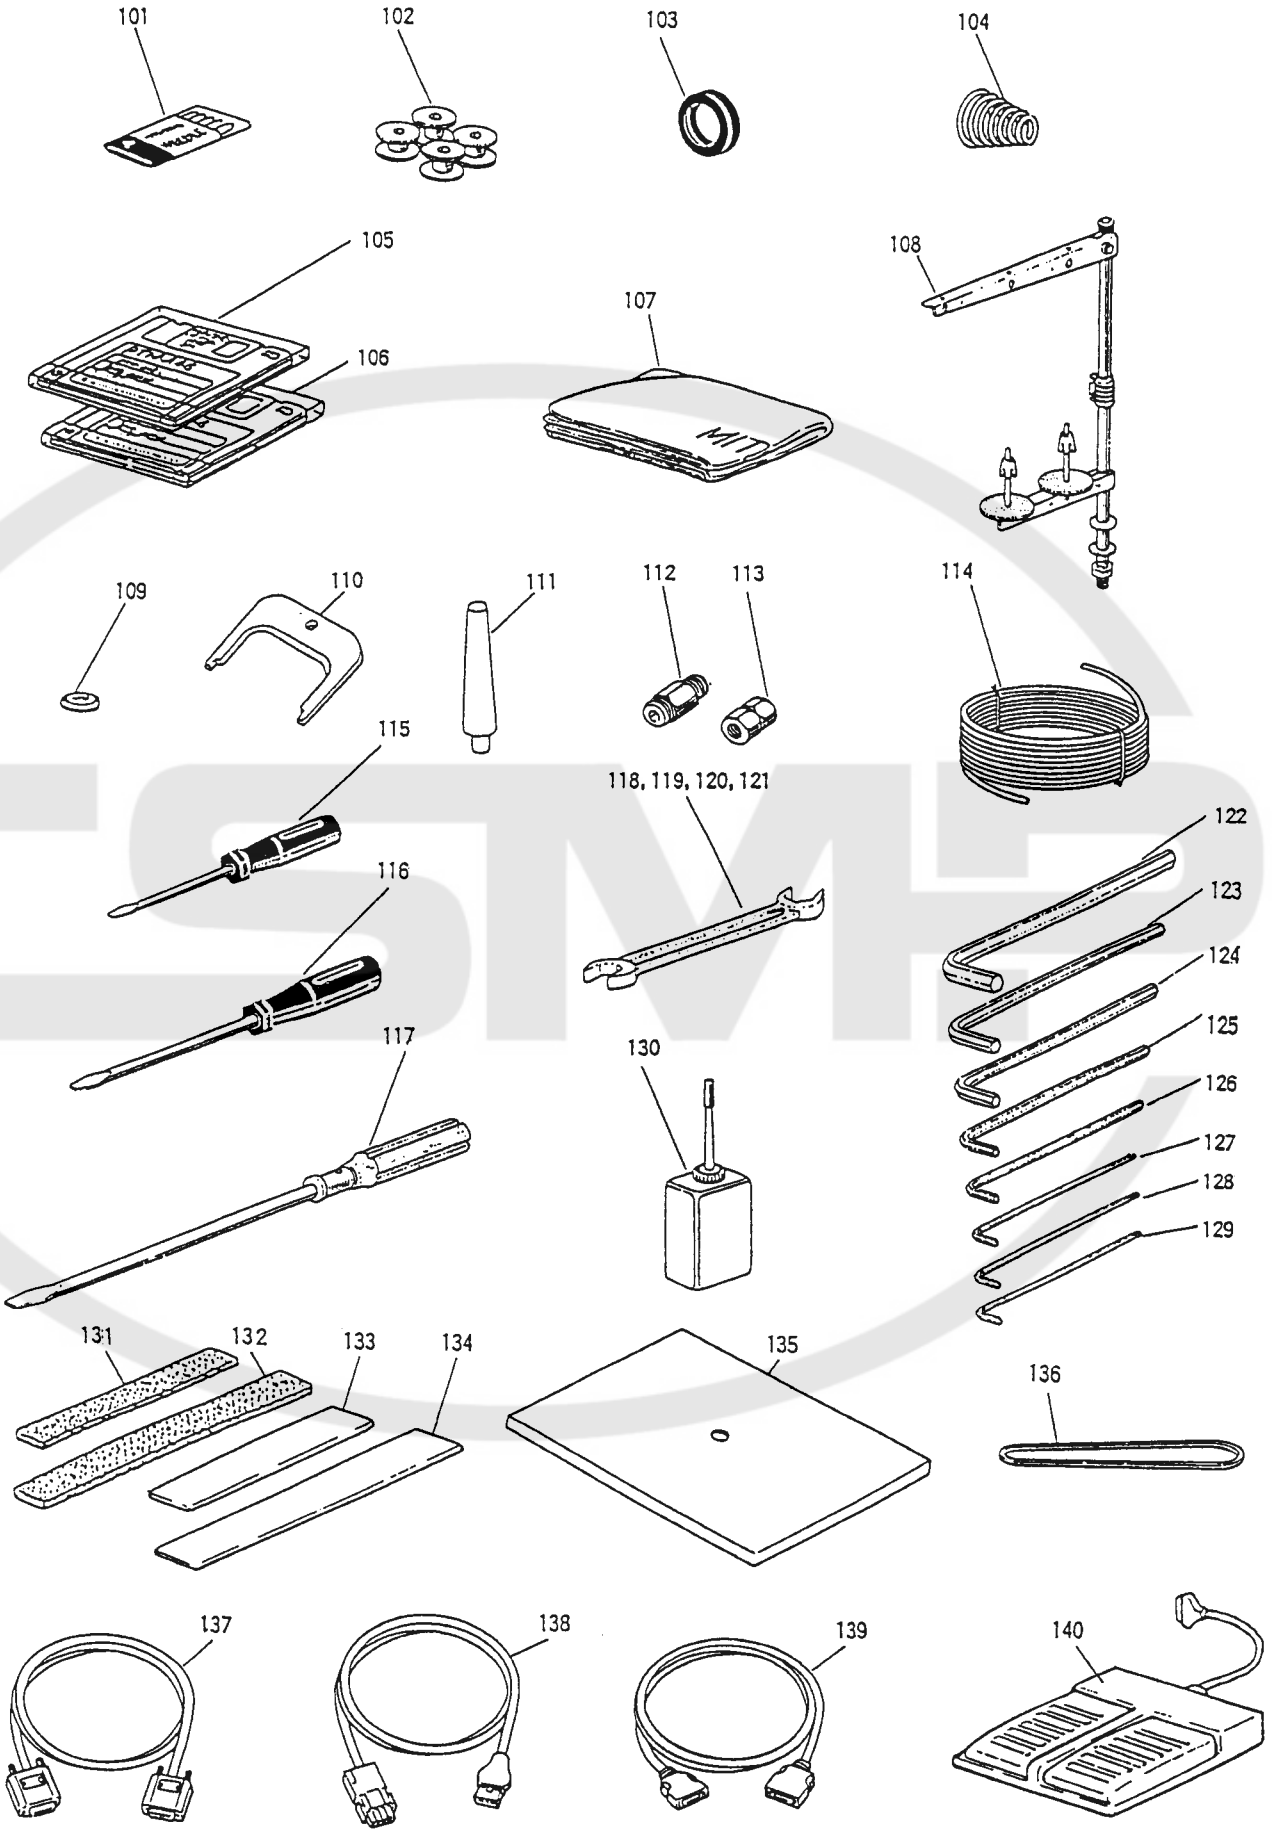
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118, 119, 120, 121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140

P 付属品
ACCESSORIES

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
P101	MS02A0128	ﾐｼﾝﾊﾞﾘ DP×17#18	Needle DP×17#18	4	4	4
P102	MA10A0123	ﾎﾞﾋﾞﾝ(SC-180ﾖｳ)	Bobbin (for SC-180)	3	3	3
P103	MS03A0417	ｺﾞﾑﾜ	Tire	1	1	1
P104	MN52A1245	ｴﾝｽｲﾊﾞﾈ	Tension spring	1	1	1
P105	MB60A0990	ﾌﾛｯﾋﾟｨﾃﾞｨｽｸ(ｼｽﾃﾑ)	Floppy disk (system)	1	1	1
P106	MB60A1990	ﾌﾛｯﾋﾟｨﾃﾞｨｽｸ(ﾃﾞｰﾀﾎﾘﾝﾖｳ)	Floppy disk (blank)	1	1	1
P107	MA20A0734	ﾋﾞﾆﾙｶﾊﾞｰ	Polyethylene cover	1	1	1
P108	MF40E0193	ｲﾄﾀﾃﾀﾞｲｸﾐﾀﾃ	Cotton stand assy.	1	1	1
P109	MB60A0419	ﾎﾞｳｼﾝｺﾞﾑ	Rubber cushion	6	6	6
P110	MF01A0565	ｶｸﾄﾞﾁｮｳｾｲｸﾞ	Disk adjusting plate	1	1	1
P111	MA20A0613	ﾄｳﾌﾞｳｹ	Head rest	1	1	1
P112	MA30A0571	ﾜﾝﾀｯﾁﾂｷﾞﾃ	Quick joint	1	1	1
P113	M91010089	ﾛｯｶｸｿｹｯﾄ	Socket	1	1	1
P114	MS06A0567	ﾁｭｰﾌﾞ	Tube	1	1	1
P115	MB02A1608	ﾄﾞﾗｲﾊﾞｰ(ｼｮｳ)	Screw driver (small)	1	1	1
P116	MB02A0608	ﾄﾞﾗｲﾊﾞｰ(ﾁｭｳ)	Screw driver (middle)	1	1	1
P117	MF00A0608	ﾄﾞﾗｲﾊﾞｰ(ﾀﾞｲ)	Screw driver (large)	1	1	1
P118	MS02A0479	ﾘｮｳｸﾞﾁｽﾊﾟﾅ13×17	Spanner 13×17	1	1	1
P119	MM10A1479	ﾘｮｳｸﾞﾁｽﾊﾟﾅ10×14	Spanner 10×14	1	1	1
P120	MS10A1976	ﾘｮｳｸﾞﾁｽﾊﾟﾅ8×9	Spanner 8×9	1	1	1
P121	MS10A2976	ﾘｮｳｸﾞﾁｽﾊﾟﾅ6×7	Spanner 6×7	1	1	1
P122	MS05A1976	ﾛｯｶｸﾎﾞｳｽﾊﾟﾅ6	Socket wrench 6	1	1	1
P123	MS05A0976	ﾛｯｶｸﾎﾞｳｽﾊﾟﾅ5	Socket wrench 5	1	1	1
P124	MS01A1976	ﾛｯｶｸﾎﾞｳｽﾊﾟﾅ4	Socket wrench 4	1	1	1
P125	MF90A0976	ﾛｯｶｸﾎﾞｳｽﾊﾟﾅ1/8	Socket wrench1/8	1	1	1
P126	MS02A2976	ﾛｯｶｸﾎﾞｳｽﾊﾟﾅ3	Socket wrench 3	1	1	1
P127	MS02A1976	ﾛｯｶｸﾎﾞｳｽﾊﾟﾅ2.5	Socket wrench 2.5	1	1	1
P128	MS02A0976	ﾛｯｶｸﾎﾞｳｽﾊﾟﾅ2	Socket wrench 2	1	1	1
P129	MS10A0976	ﾛｯｶｸﾎﾞｳｽﾊﾟﾅ1.5	Socket wrench 1.5	1	1	1
P130	MF10A0149	ｱﾌﾞﾗｻｼ	Oiler with oil	1	1	1
P131	MB35A0691	ﾊﾟｯｷﾝ (ｼﾀｵｻｴｲﾀﾖｳ)	Clamp pad (for feed plate)	2	2	2
P132	MB35A2691	ﾊﾟｯｷﾝ (ｼﾀｵｻｴｲﾀﾖｳ)	Clamp pad (for feed plate)	2		
P132	MB36A0691	ﾊﾟｯｷﾝ (ｼﾀｵｻｴｲﾀﾖｳ)	Clamp pad (for feed plate)		2	
P132	MB65A0691	ﾊﾟｯｷﾝ (ｼﾀｵｻｴｲﾀﾖｳ)	Clamp pad (for feed plate)			2
P133	MB35A1691	ﾊﾟｯｷﾝ(ｿﾄｵｻｴﾖｳ)	Clamp pad (for clamp frame)	2	2	2
P134	MB35A3691	ﾊﾟｯｷﾝ(ｿﾄｵｻｴﾖｳ)	Clamp pad (for clamp frame)	2		
P134	MB36A1691	ﾊﾟｯｷﾝ(ｿﾄｵｻｴﾖｳ)	Clamp pad (for clamp frame)		2	
P134	MB65A1691	ﾊﾟｯｷﾝ(ｿﾄｵｻｴﾖｳ)	Clamp pad (for clamp frame)			2
P135	MA36A0797	ﾎｺﾞﾌｨﾙﾑ	Film sheet	1	1	
P135	MA60A0797	ﾎｺﾞﾌｨﾙﾑ	Film sheet			1
P137	M97320099	ｹｰﾌﾞﾙ(ｿﾚﾉｲﾄﾞ)	Cable (out of solenoid)	1	1	1
P138	M97318099	ｹｰﾌﾞﾙ(ｻｰﾎﾞﾓｰﾀﾃﾞﾝｹﾞﾝ)	Cable (servo motor)	1	1	1
P139	M97319099	ｹｰﾌﾞﾙ(ﾆｭｳﾘｮｸｼﾝｺﾞｳ)	Cable (input signal)	1	1	1
P140	M860A0FSW	ﾌｯﾄｽｲｯﾁ	Foot switch	1	1	1

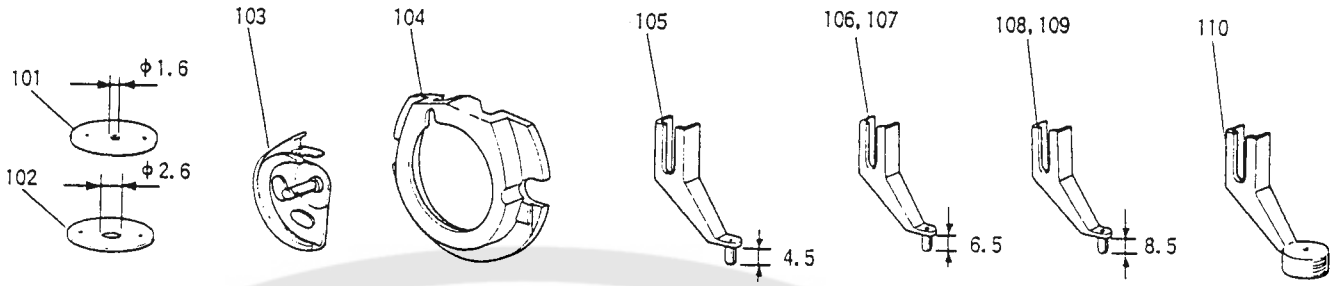
101
φ1.6
102
φ2.6
103
104
105
4.5
106, 107
6.5
108, 109
8.5
110

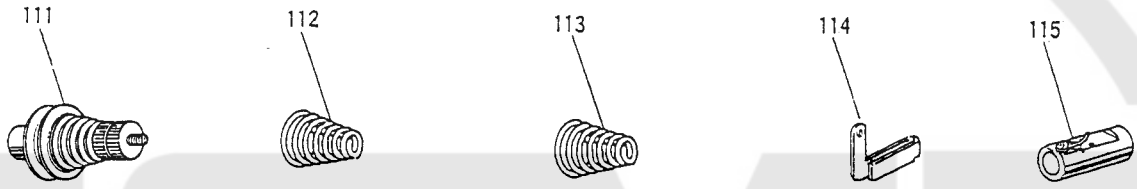
111
112
113
114
115

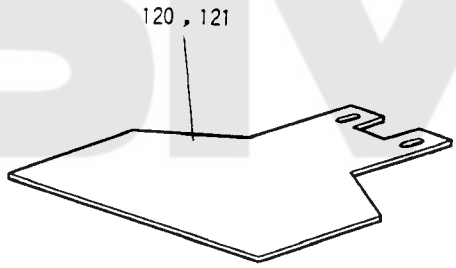
120 , 121

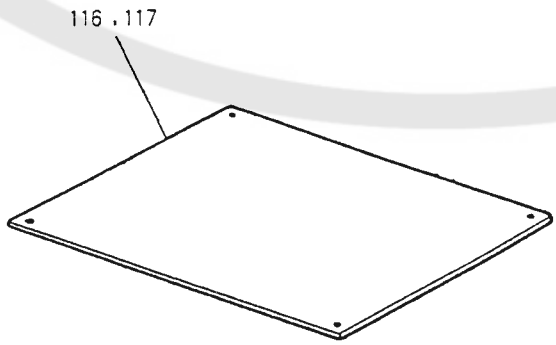
116 , 117

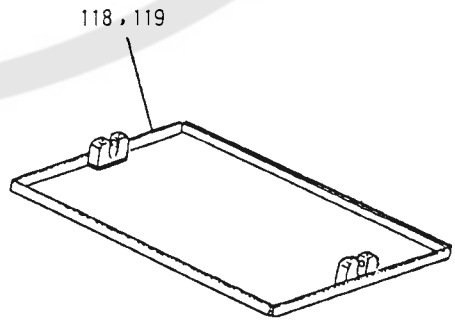
118 , 119

R オプションパーツ
OPTION PARTS

Fig No.	部品コード Parts No.	品名	Description	数量 Amt.Req. 3530	3530L	6030
R101	MS03A0101	ﾊﾘｲﾀ(φ1.6)	Needle plate (φ1.6)	1	1	1
R102	MS03A2101	ﾊﾘｲﾀ(φ2.6)	Needle plate (φ2.6)	1	1	1
R103	MS17A1120	ﾅｶｶﾞﾏD(ｱﾂﾓﾉﾖｳ)	Inner hook D (for heavy)	1	1	1
R104	MS01A1616	ﾅｶｶﾞﾏｵｻｴ(ｱﾂﾓﾉﾖｳ)	Inner hook clamper(for heavy)	1	1	1
R105	MV30A1256	ﾅｶｵｻｴ(φ2)	Presser foot (φ2)	1	1	1
R106	MS03A0256	ﾅｶｵｻｴ(φ3)	Presser foot (φ3)	1	1	1
R107	MS03A1256	ﾅｶｵｻｴ(φ2)	Presser foot (φ2)	1	1	1
R108	MA35A0256	ﾅｶｵｻｴ(φ3)	Presser foot (φ3)	1	1	1
R109	MA35A1256	ﾅｶｵｻｴ(φ2)	Presser foot (φ2)	1	1	1
R110	MV35A0106	ｻﾗｵｻｴ(φ3)	Presser foot (φ3)	1	1	1
R111	MS04E1210	ｳﾜｲﾄﾁｮｳｾﾂｷｸﾐﾀﾃ	Thread tension regulator assy	1	1	1
R112	MF10A1245	ｴﾝｽｲﾊﾞﾈ(ﾌﾟﾘﾃﾝｼｮﾝ)	Thread pretension spring	1	1	1
R113	MN10A3245	ｴﾝｽｲﾊﾞﾈ(ｳﾜｲﾄﾁｮｳｾﾂｷ)	Tension regulator spring	1	1	1
R114	MS03A0181	ｲﾄｱﾝﾅｲｸﾐﾀﾃ	Thread guide assy	1	1	1
R115	MS10A0180	ｲﾄｱﾝﾅｲｸﾐﾀﾃ	Thread guide assy	1	1	1
R116	MB35A1105	ｿﾄｵｻｴｲﾀ(ｱﾅﾅｼ)	Clamp frame(blank)	1		
R117	MB36A1105	ｿﾄｵｻｴｲﾀ(ｱﾅﾅｼ)	Clamp frame(blank)		1	
R118	MS18E1105	ｿﾄｵｻｴｸﾐ(ｱﾅﾅｼ)	Clamp frame assy. (blank)	1		
R119	MB36E1105	ｿﾄｵｻｴｸﾐ(ｱﾅﾅｼ)	Clamp frame assy. (blank)		1	
R120	MS18A0272	ｼﾀｵｻｴｲﾀ(ｱﾅﾅｼ)	Feed plate(blank)	1		
R121	MA36A1272	ｼﾀｵｻｴｲﾀ(ｱﾅﾅｼ)	Feed plate(blank)		1	